



Floor standing enclosures


Mild steel IP protected ICT Rack

MOUNTING INSTRUCTIONS

7697-0501-68 REV. 5

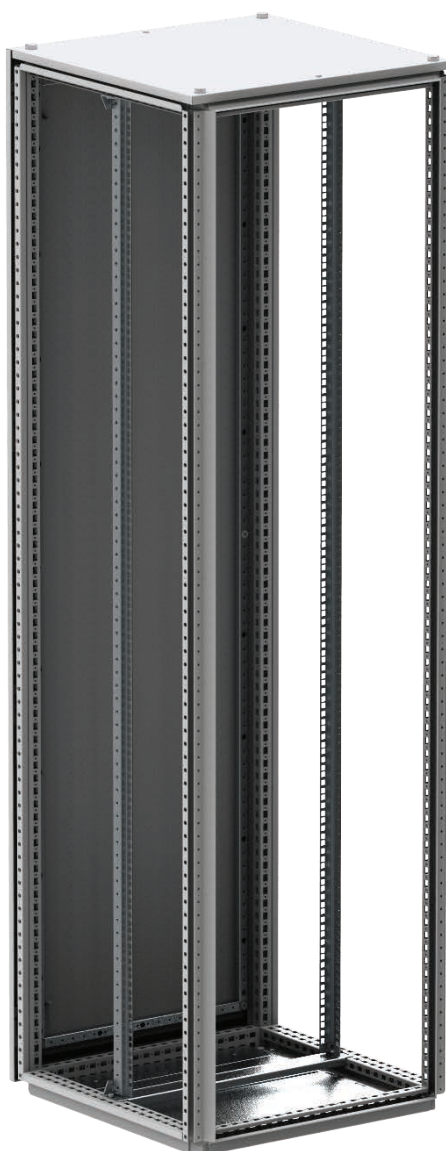


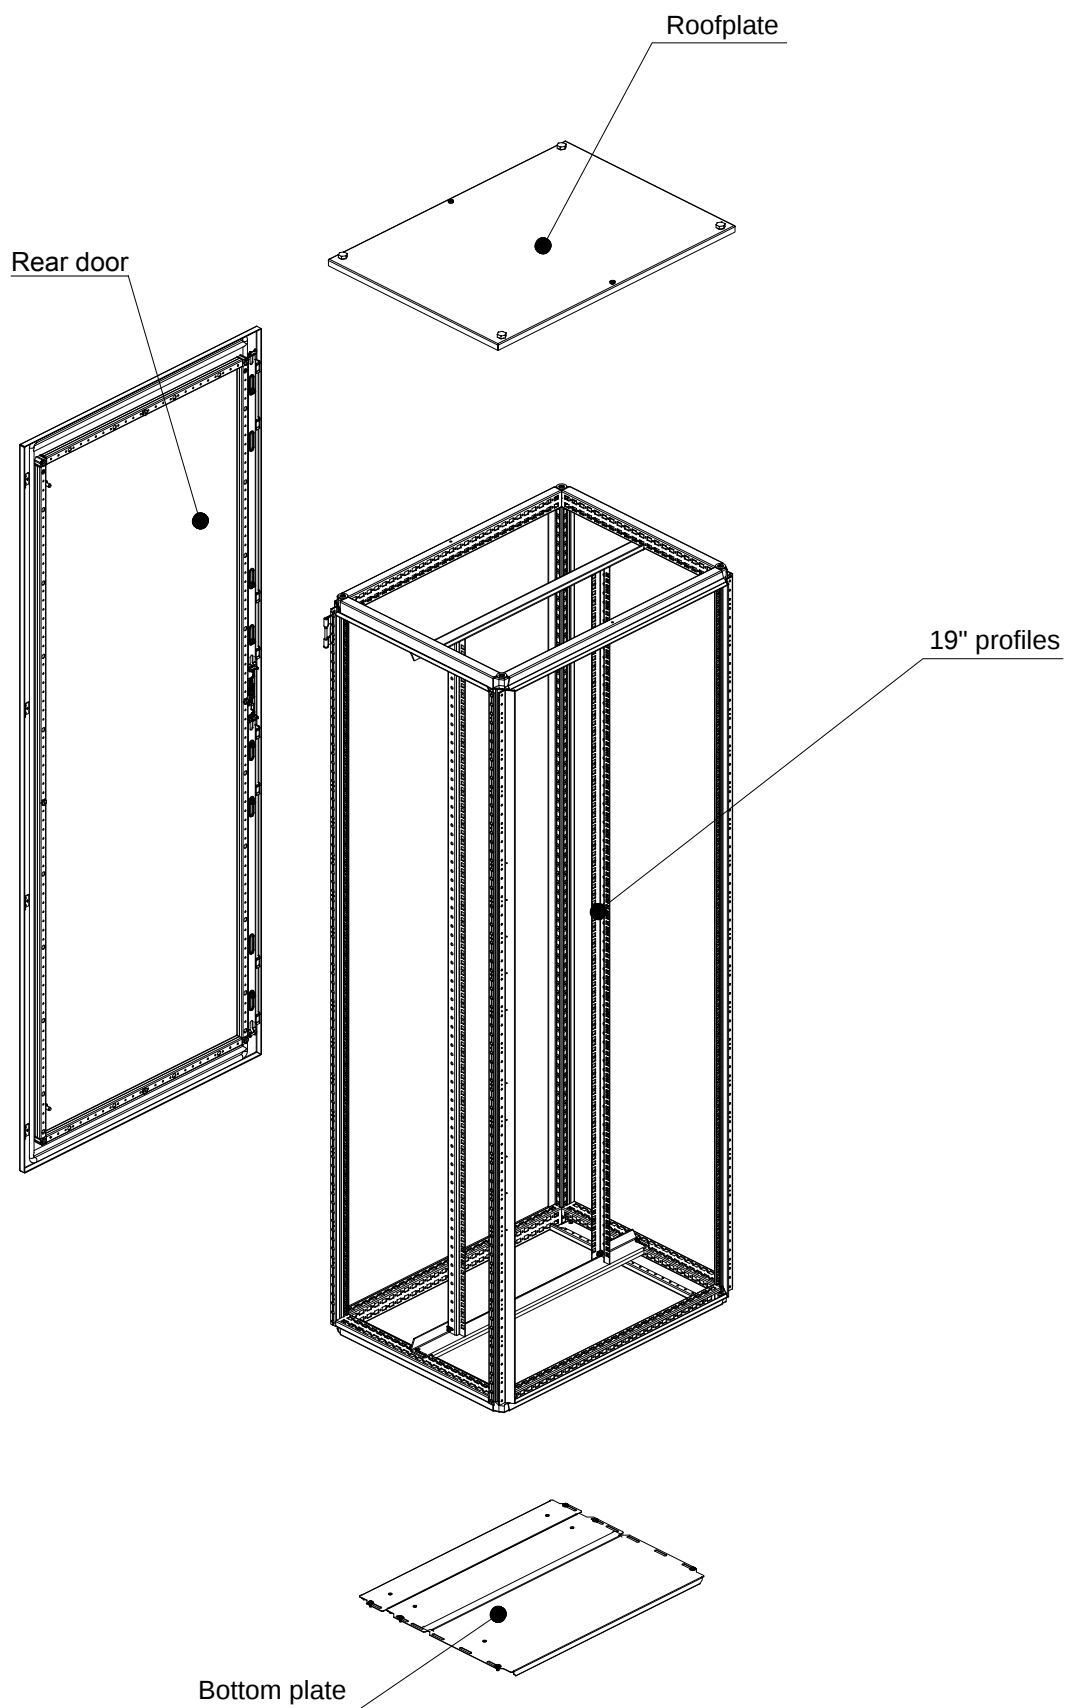


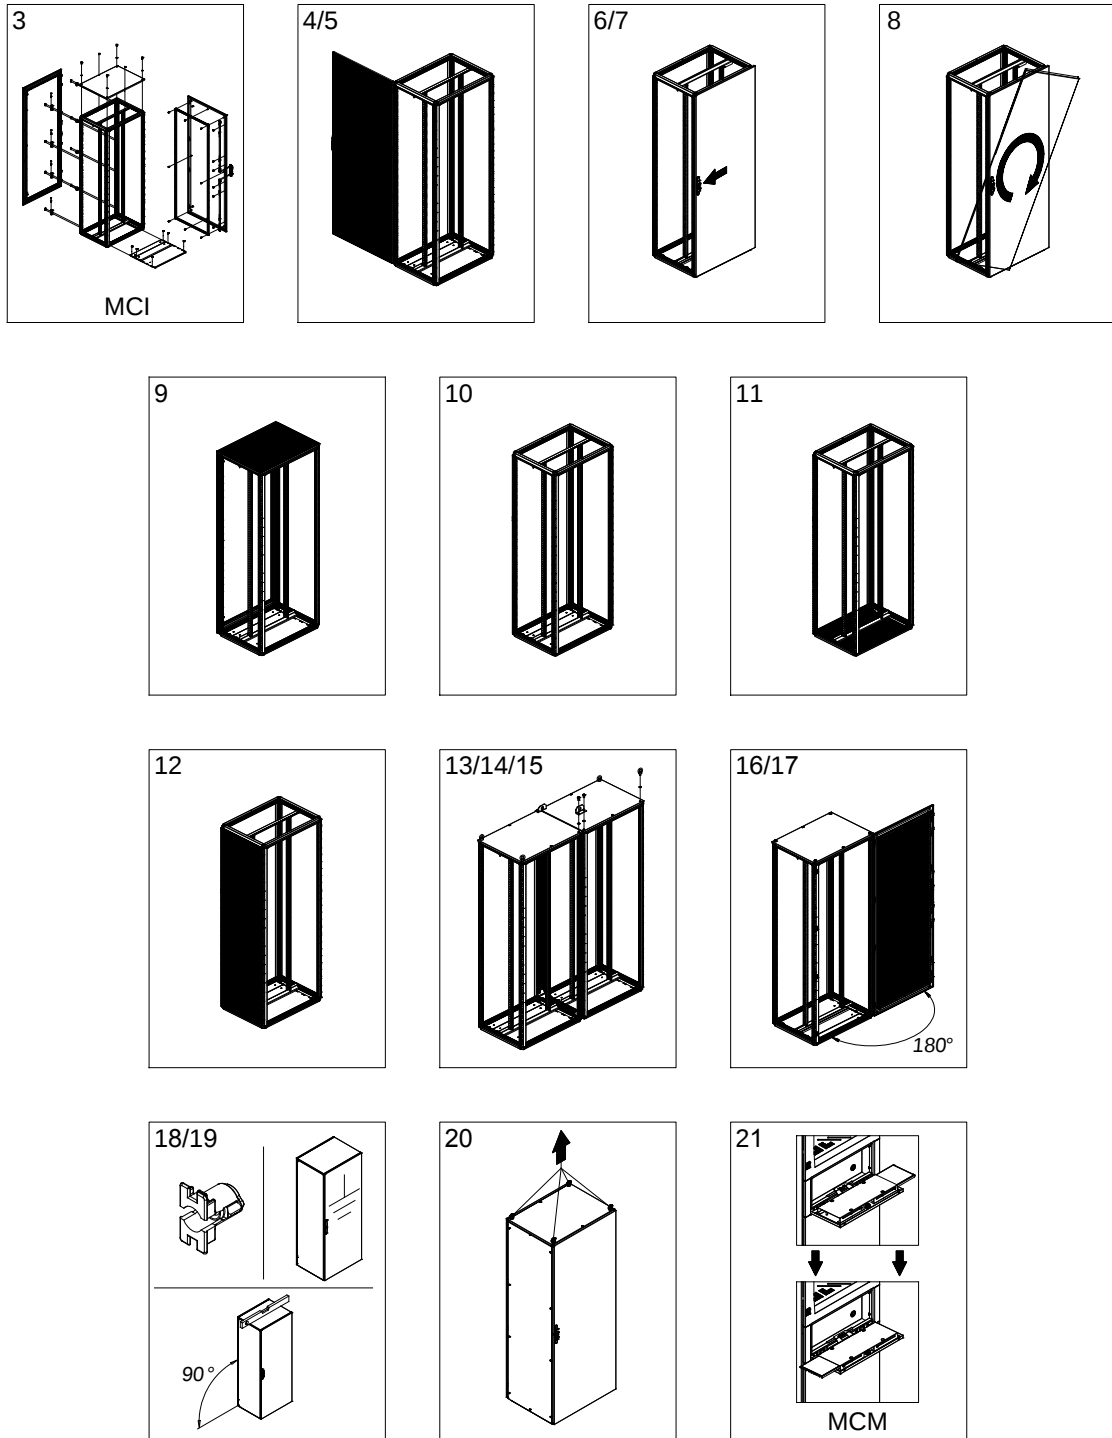


WARNING: When mounting on or over a combustible surface, a floor plate of at least 1.43 mm galvanized or 1.6 mm uncoated steel extended at least 150 mm beyond the equipment on all sides must be installed.

WARNING: In order to maintain the environmental integrity of the enclosure, devices with the same environmental ratings shall be used to close openings in customized enclosure.


MCI

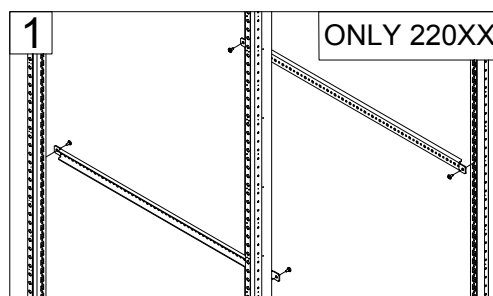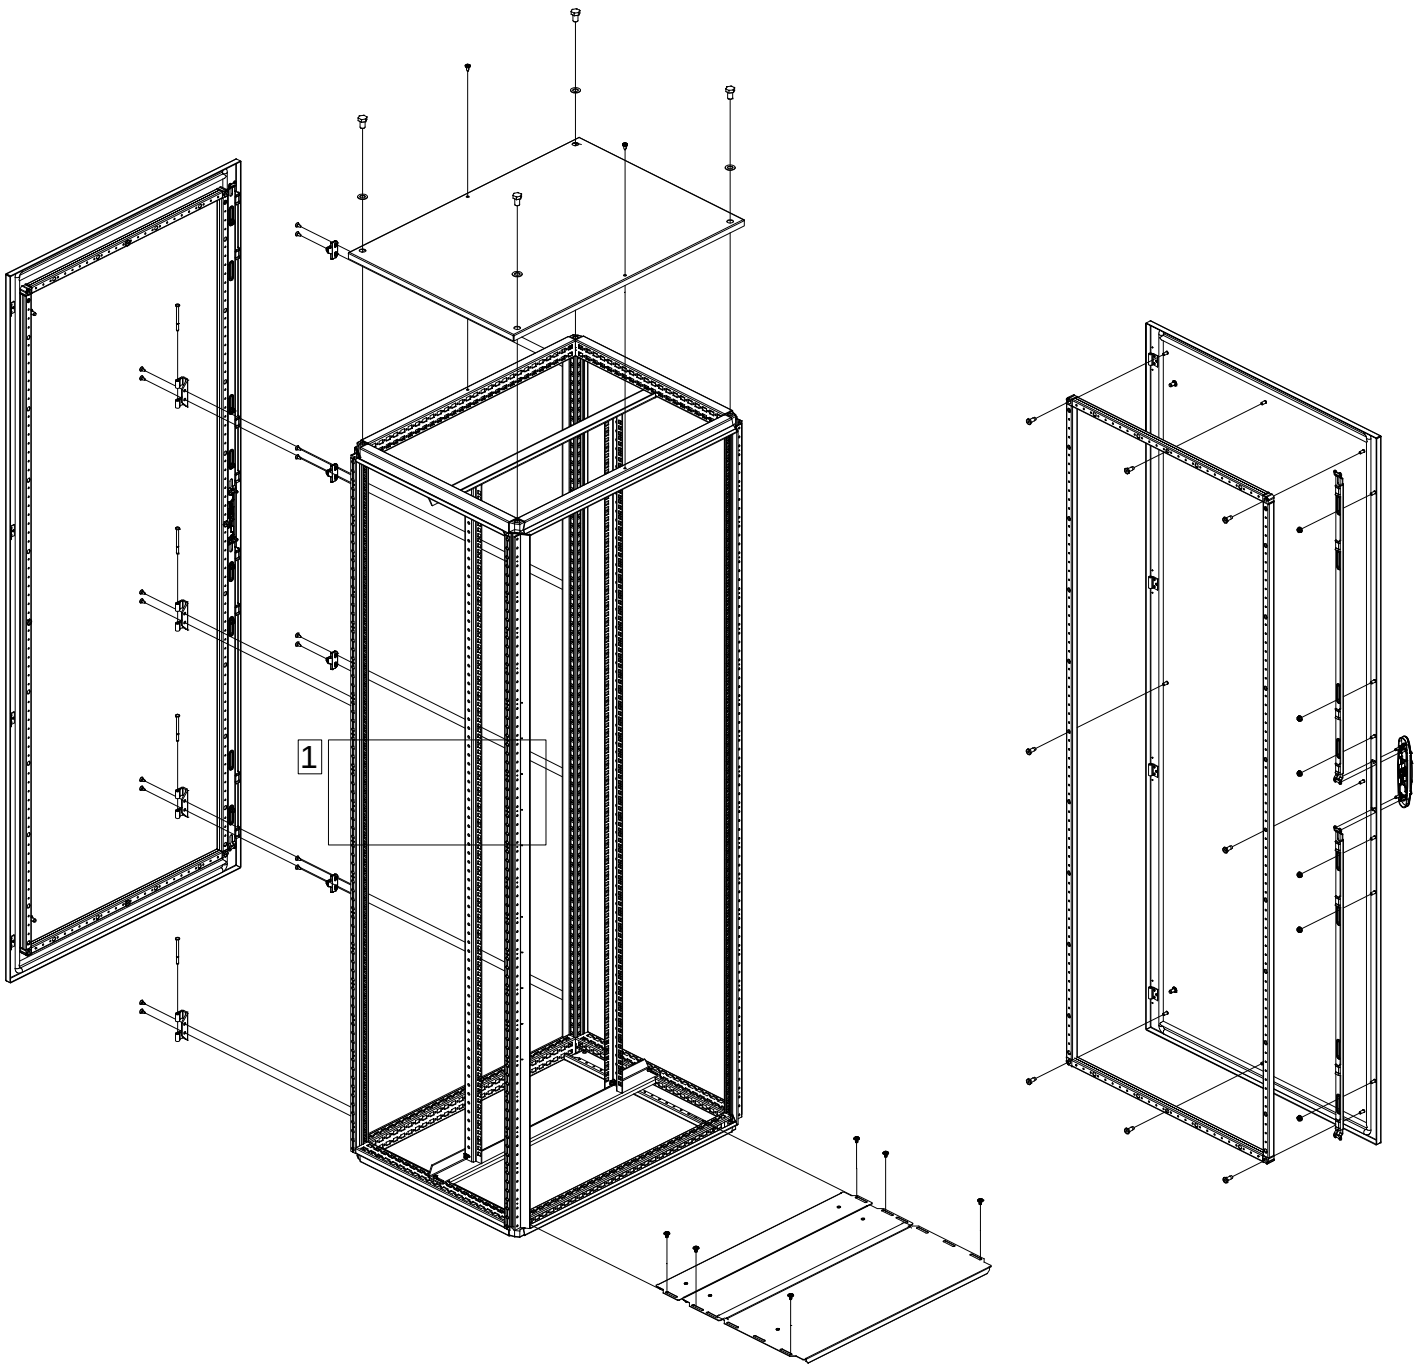








COMBINABLE ENCLOSURE

H	A
1100	175
1400	325
1600	425
1800	525
2000	625
2200	725







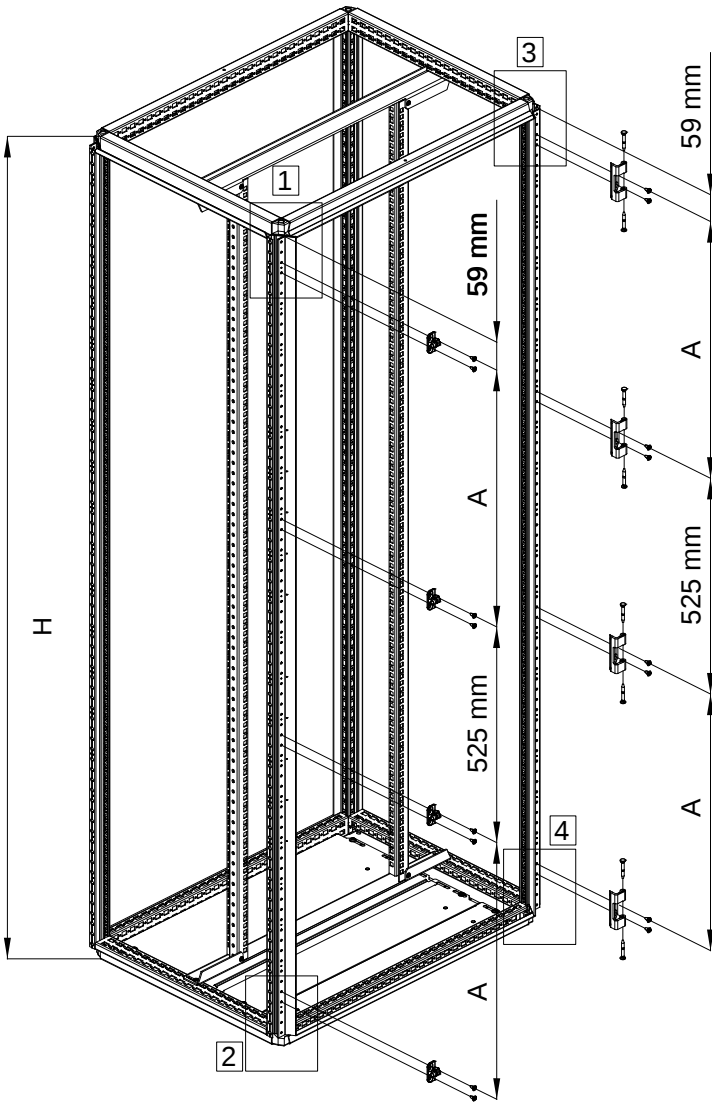


Rear door

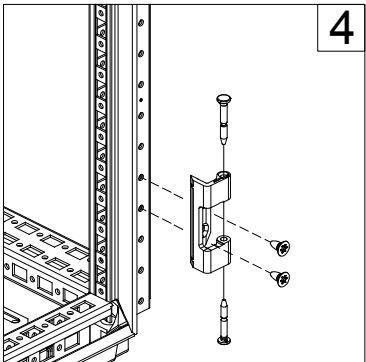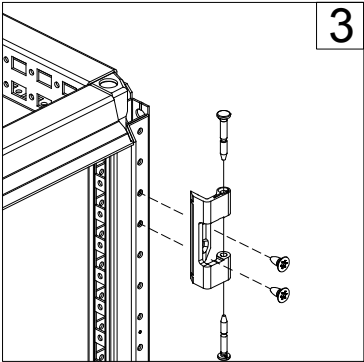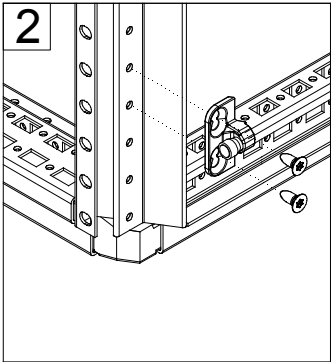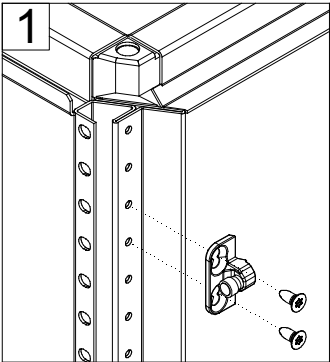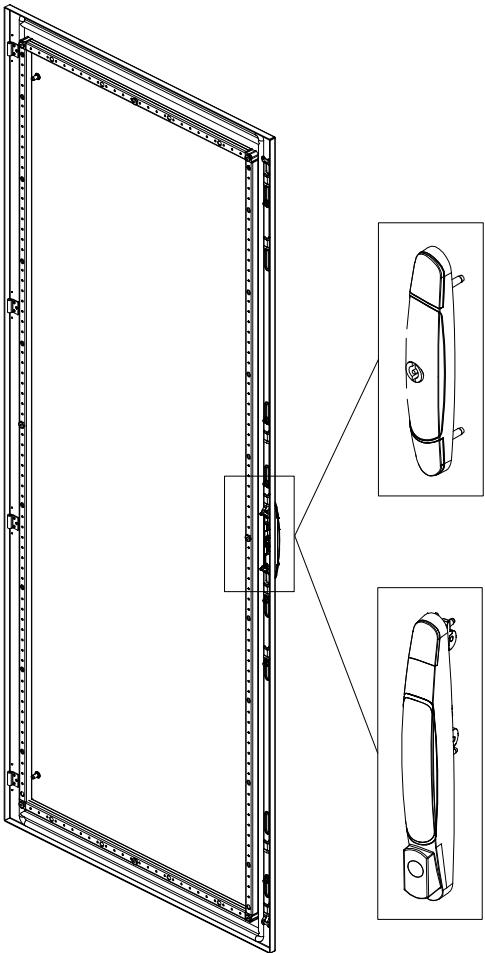











Ref.	Pic.	Qty.
A	 M5x10	2
B	 M5	4

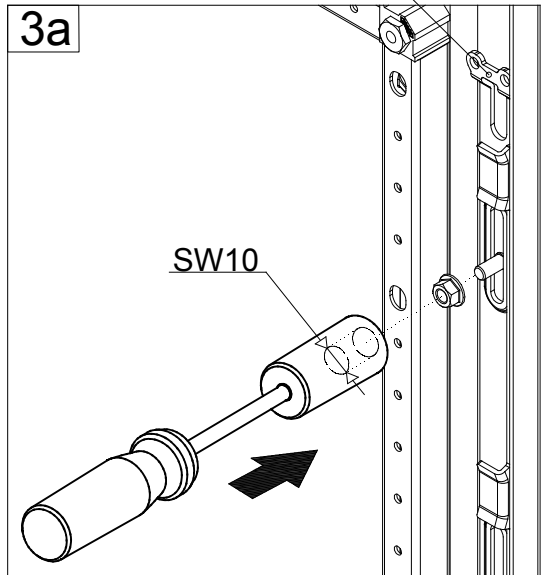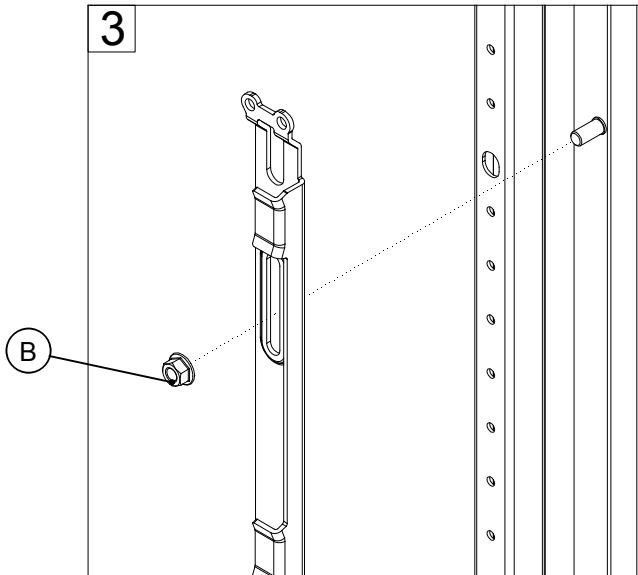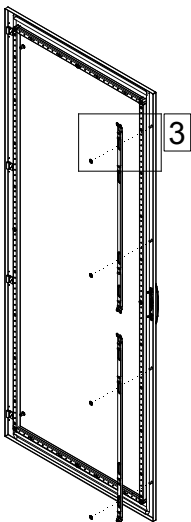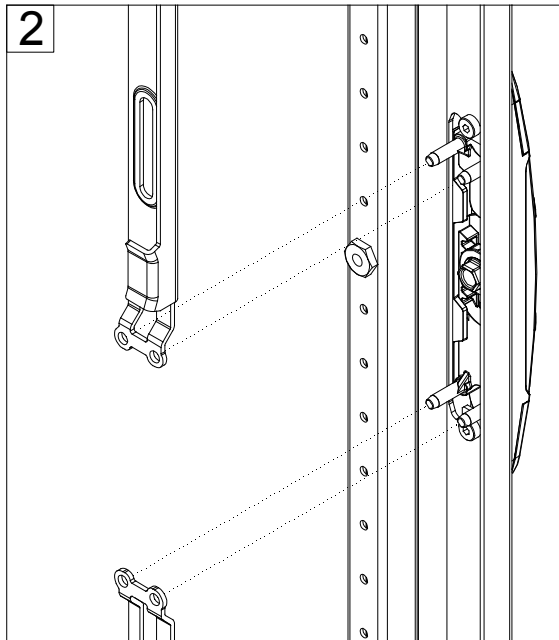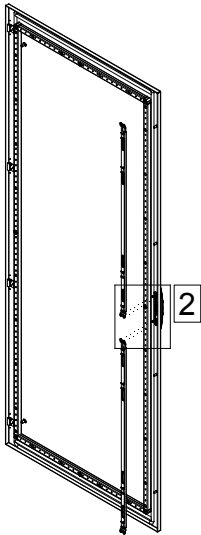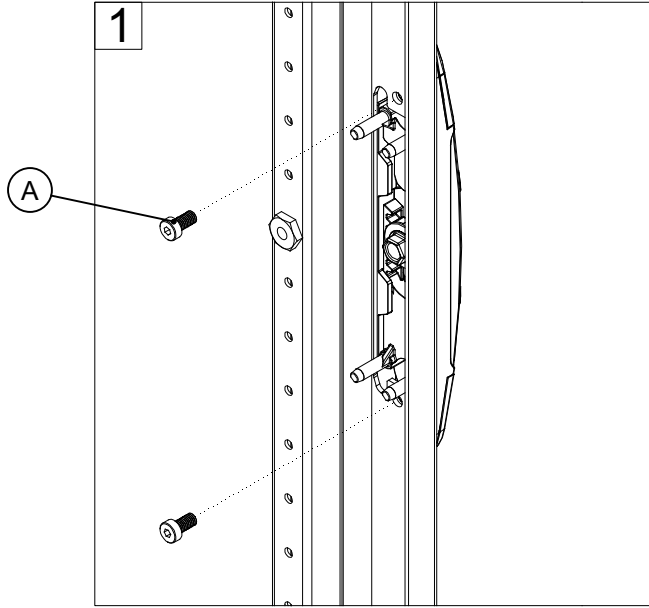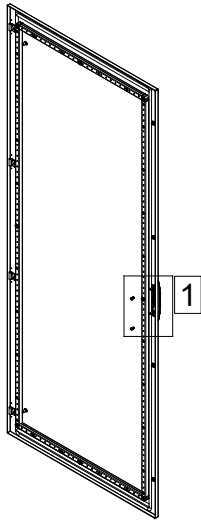




MOUNTING THE LIFT HANDLE

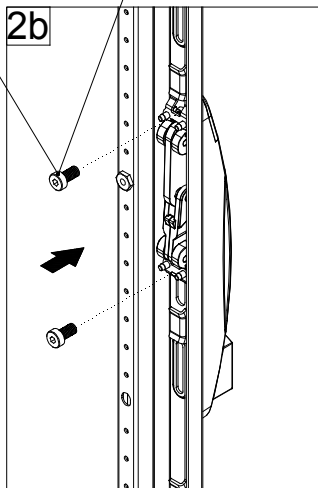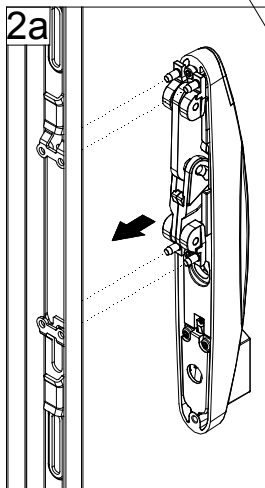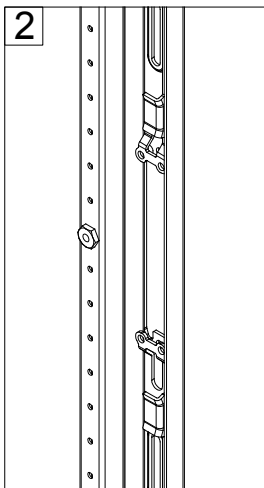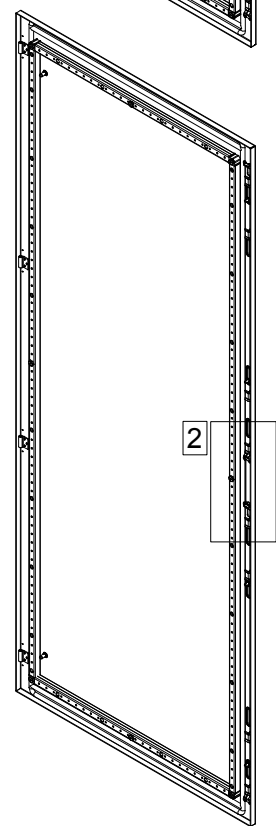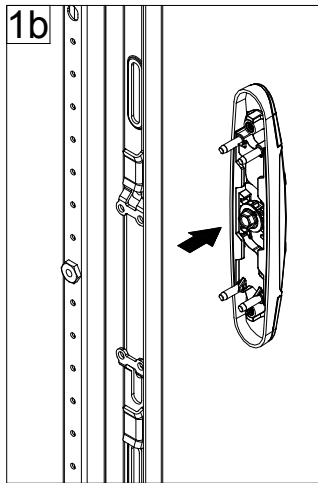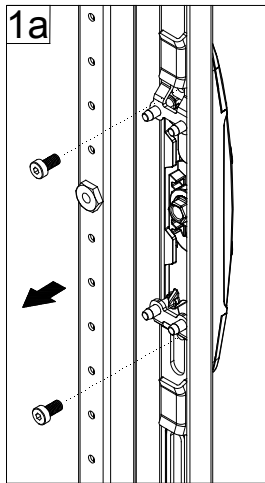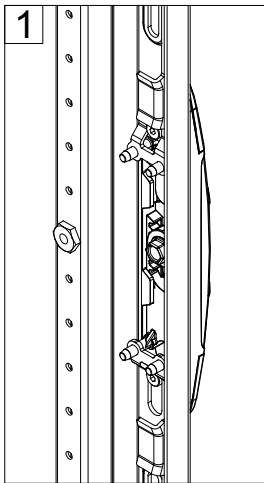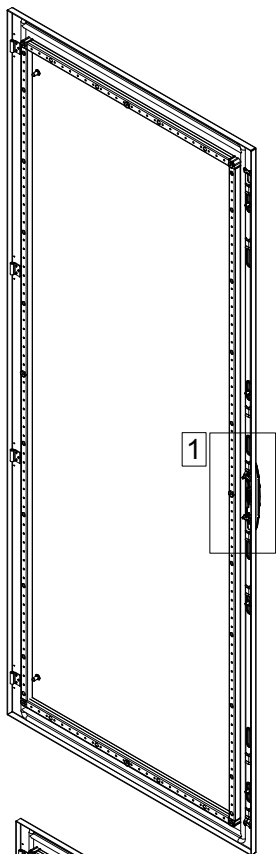


Torque
4-5.5 Nm


A

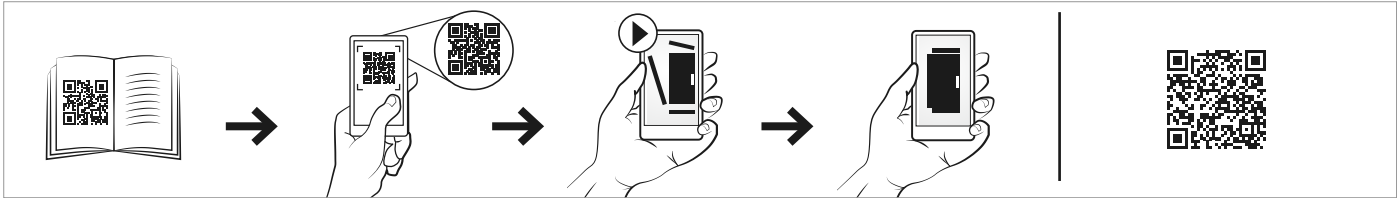


Standard Locking System




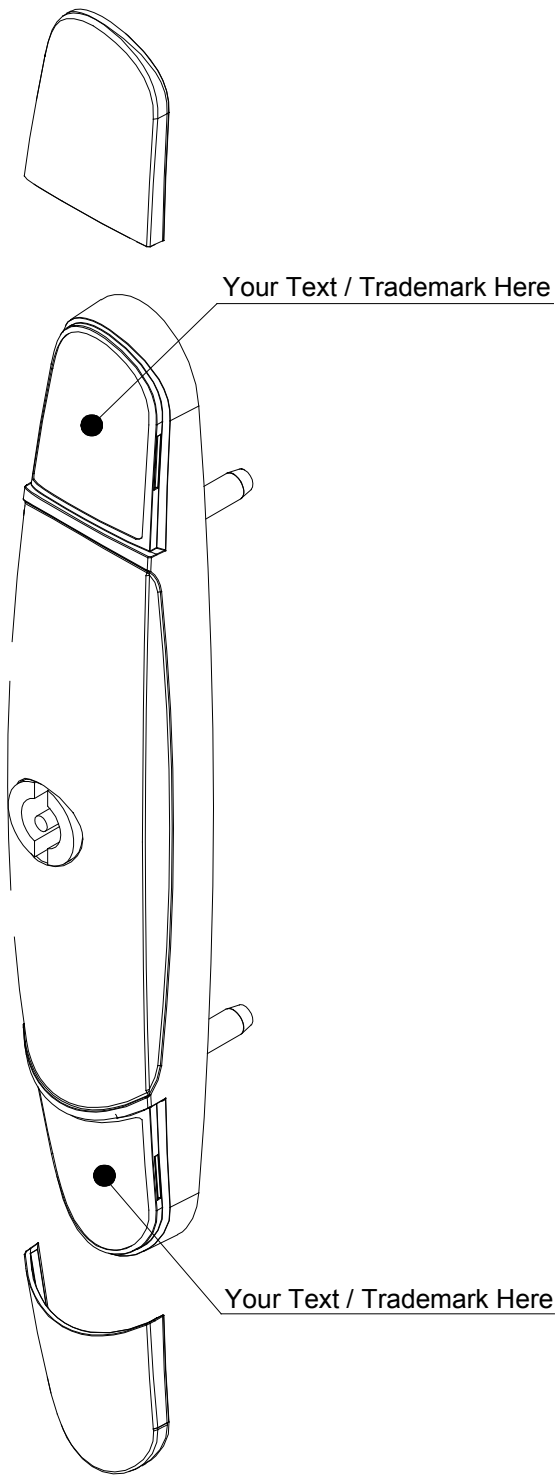


Lift Handle Locking System








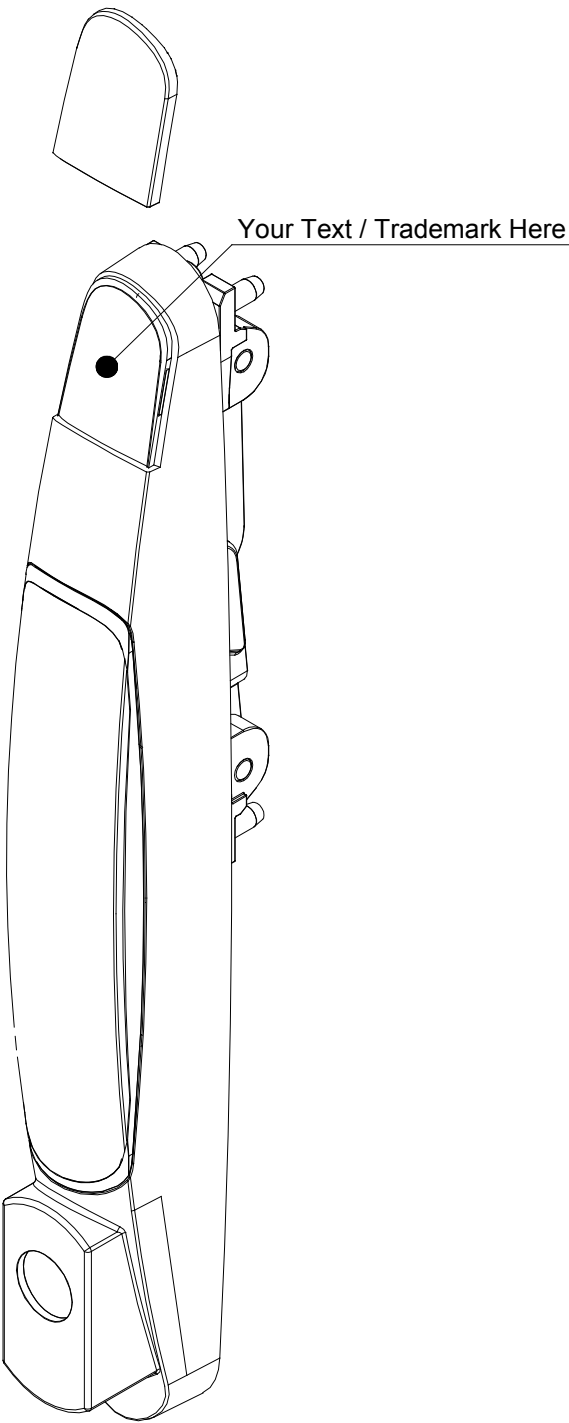


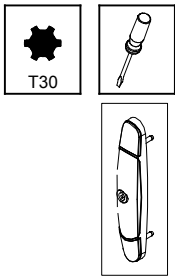

Standard Locking System

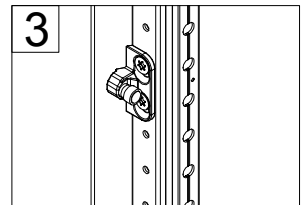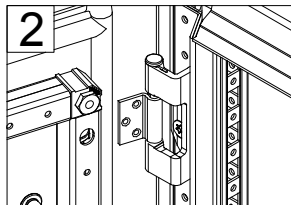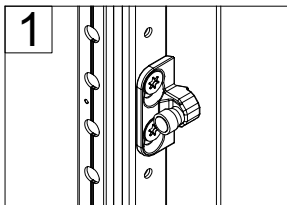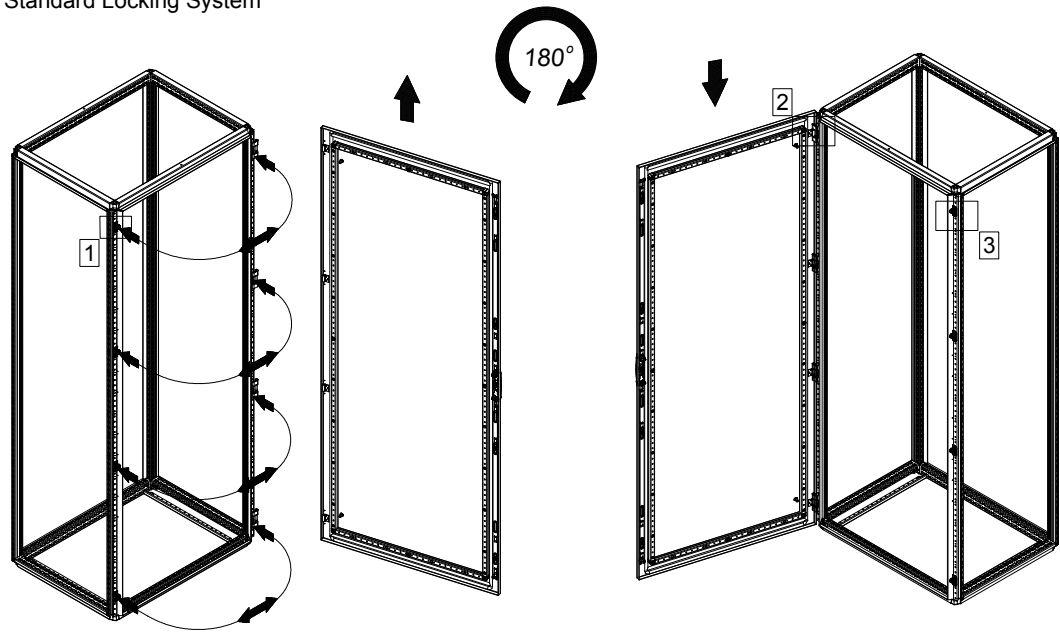


Lift Handle Locking System

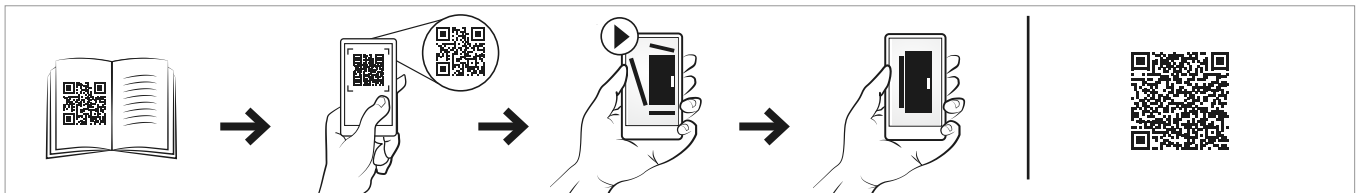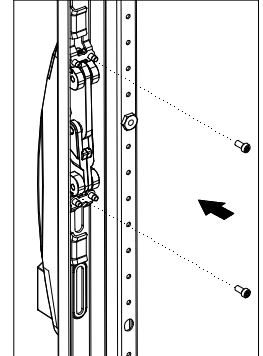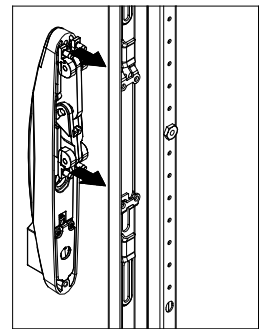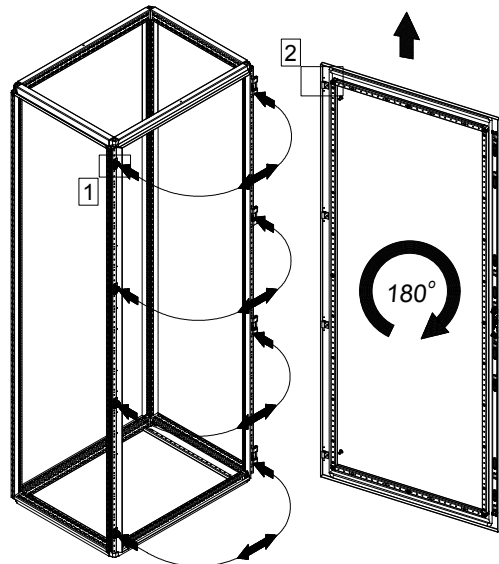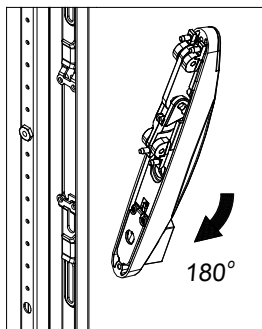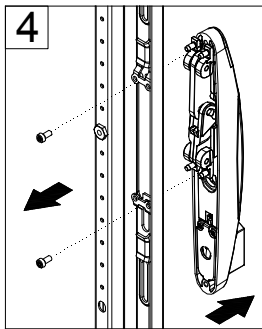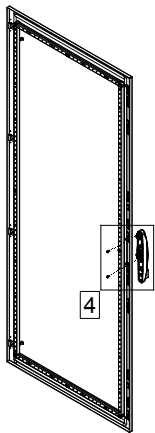




Roof panel



Ref.	Pic.	D (mm)	<800	≥800
A	 M6x12		2	4
B	 M12x20		4	4
C	 M12		4	4

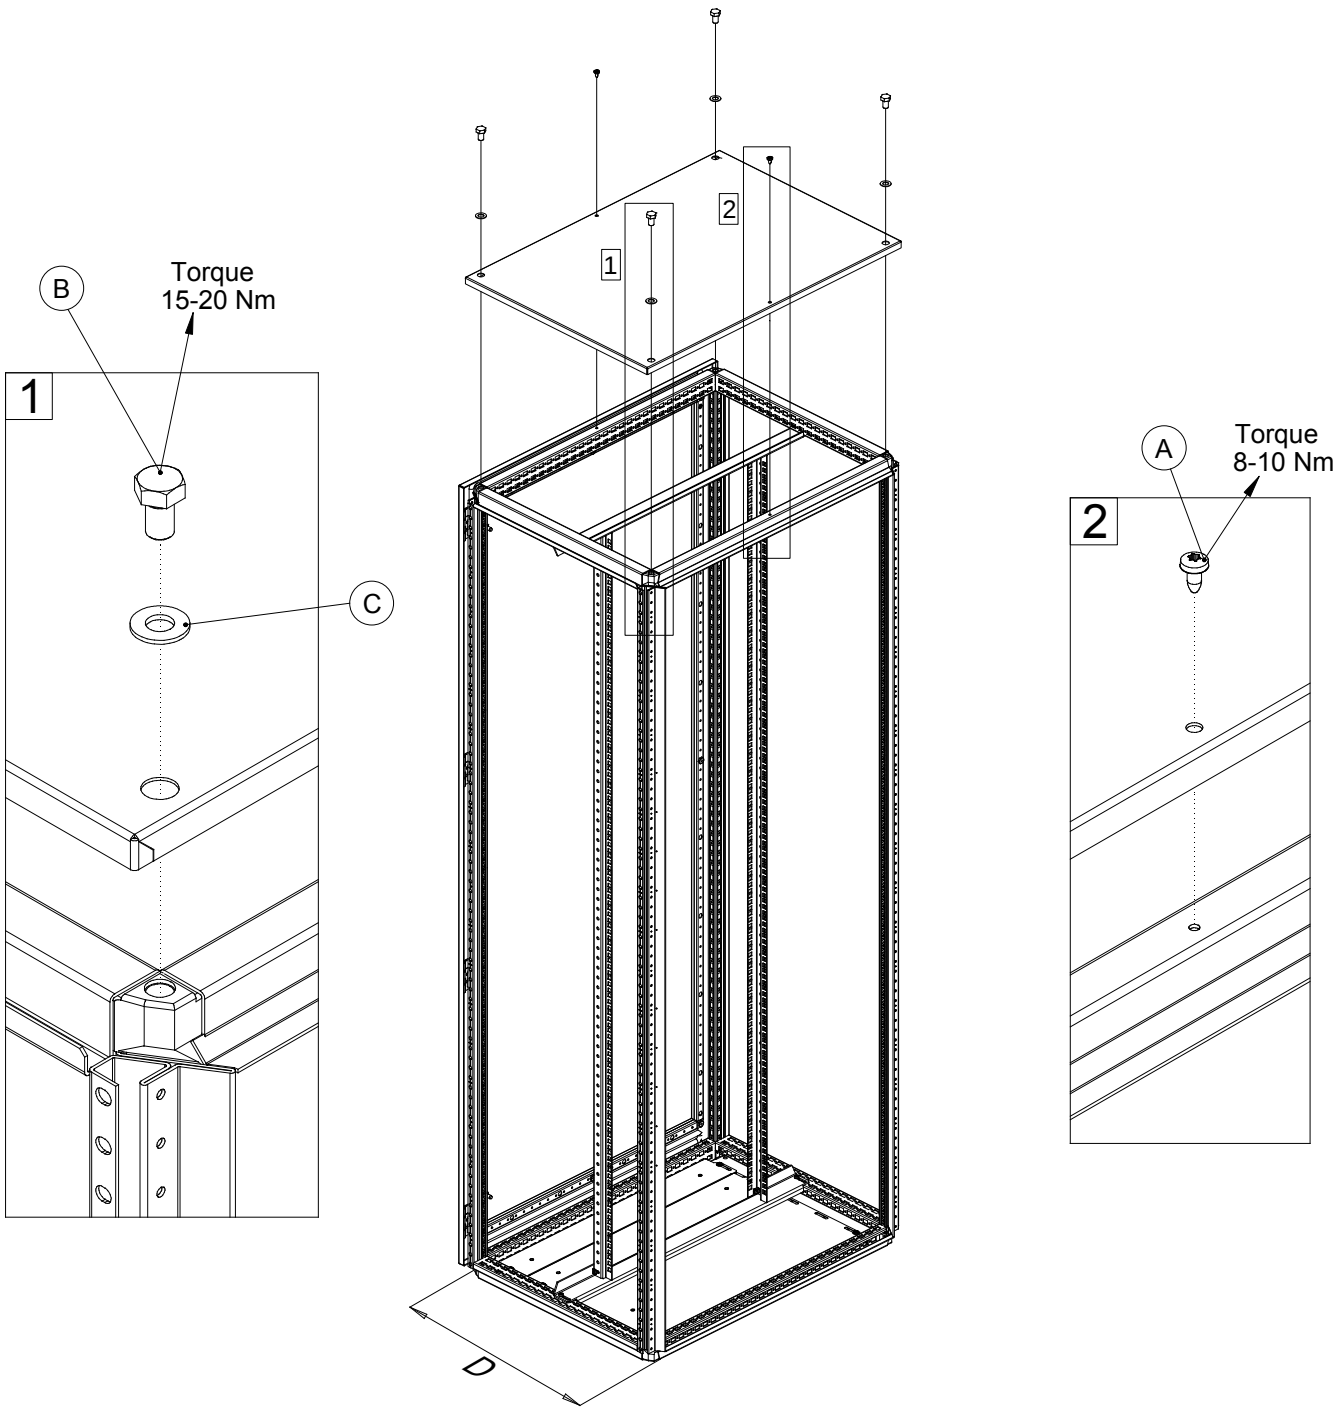



19" profiles


Ref.	Pic.	Qty.
A	 M6x12	4
B	 M6x16	4
C	 M6	4
D	 M6	4
E		2

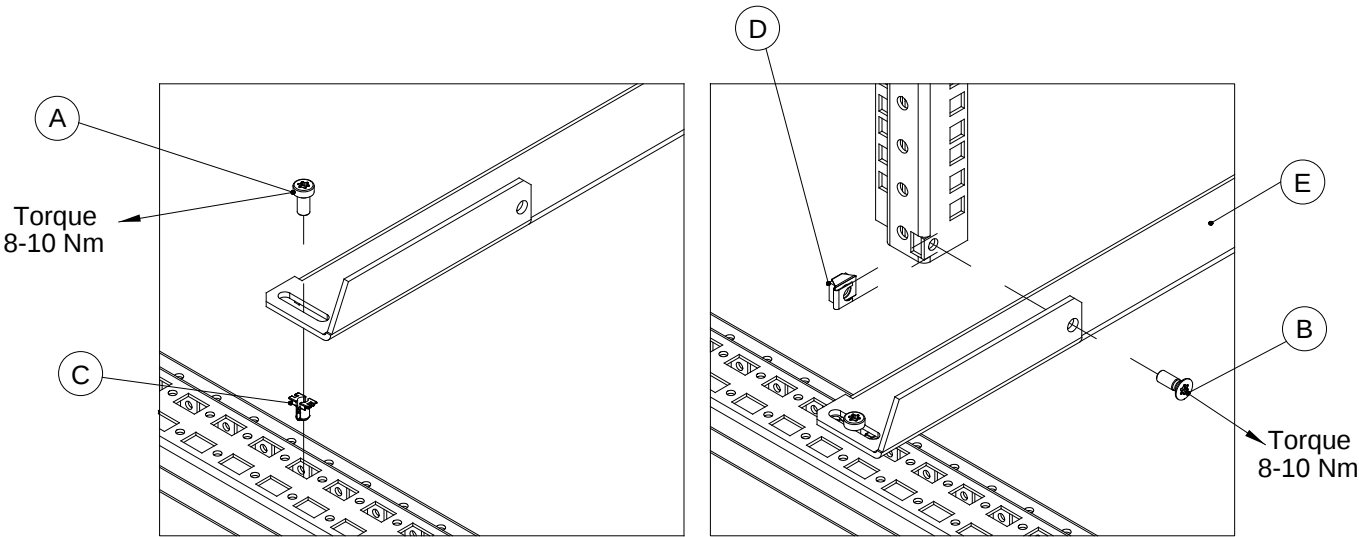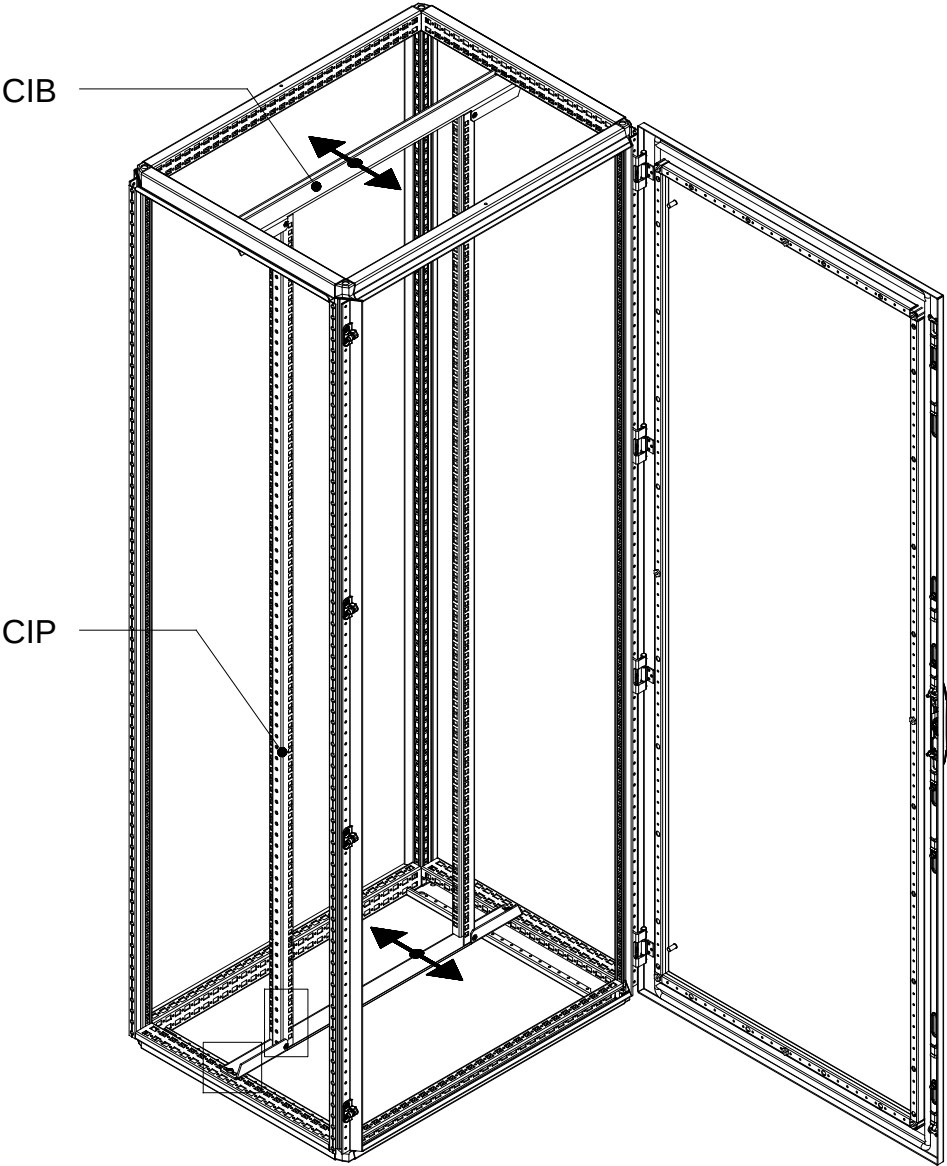






Bottom plate

Ref.	Pic.	Qty.
A	St. 5.5x10	6/8/12/16
B		4
C		5/7/10/14

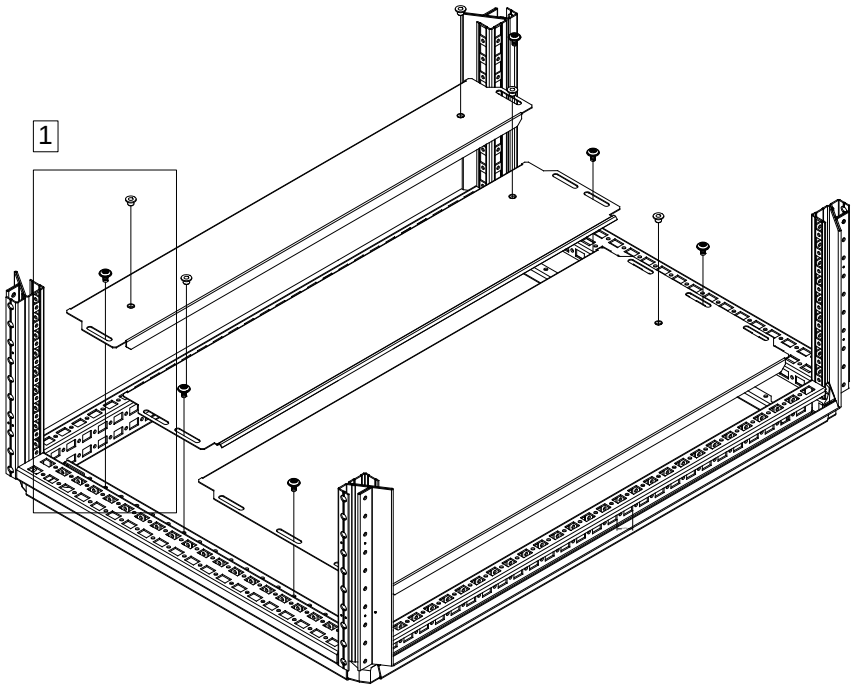

Torque
10-15 Nm


A

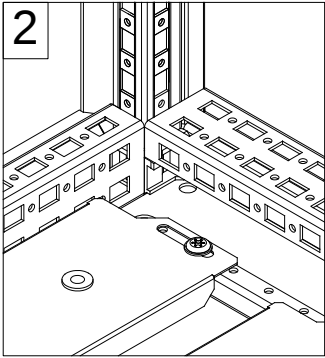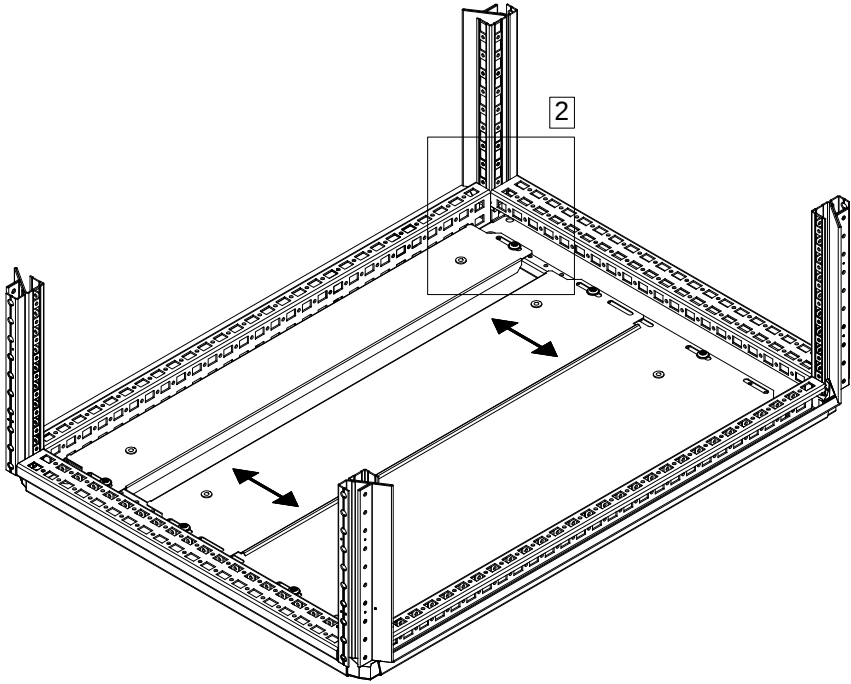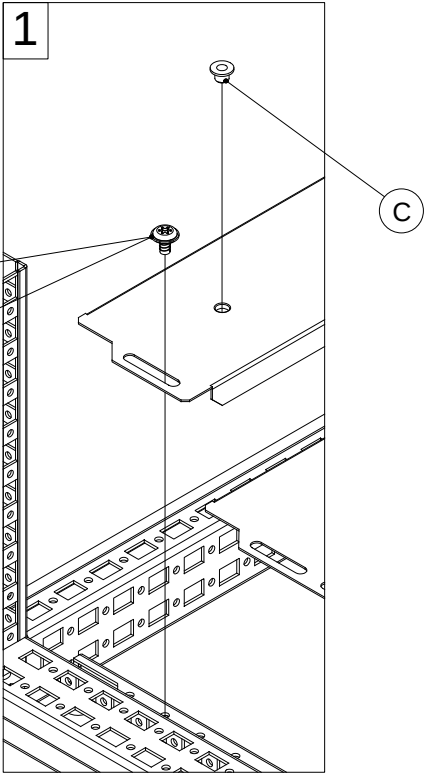

SPM


Ref.	Pic.	Qty.
A		6/8/9
B	 M4x14	6/8/9
C		2

Side panel mounting

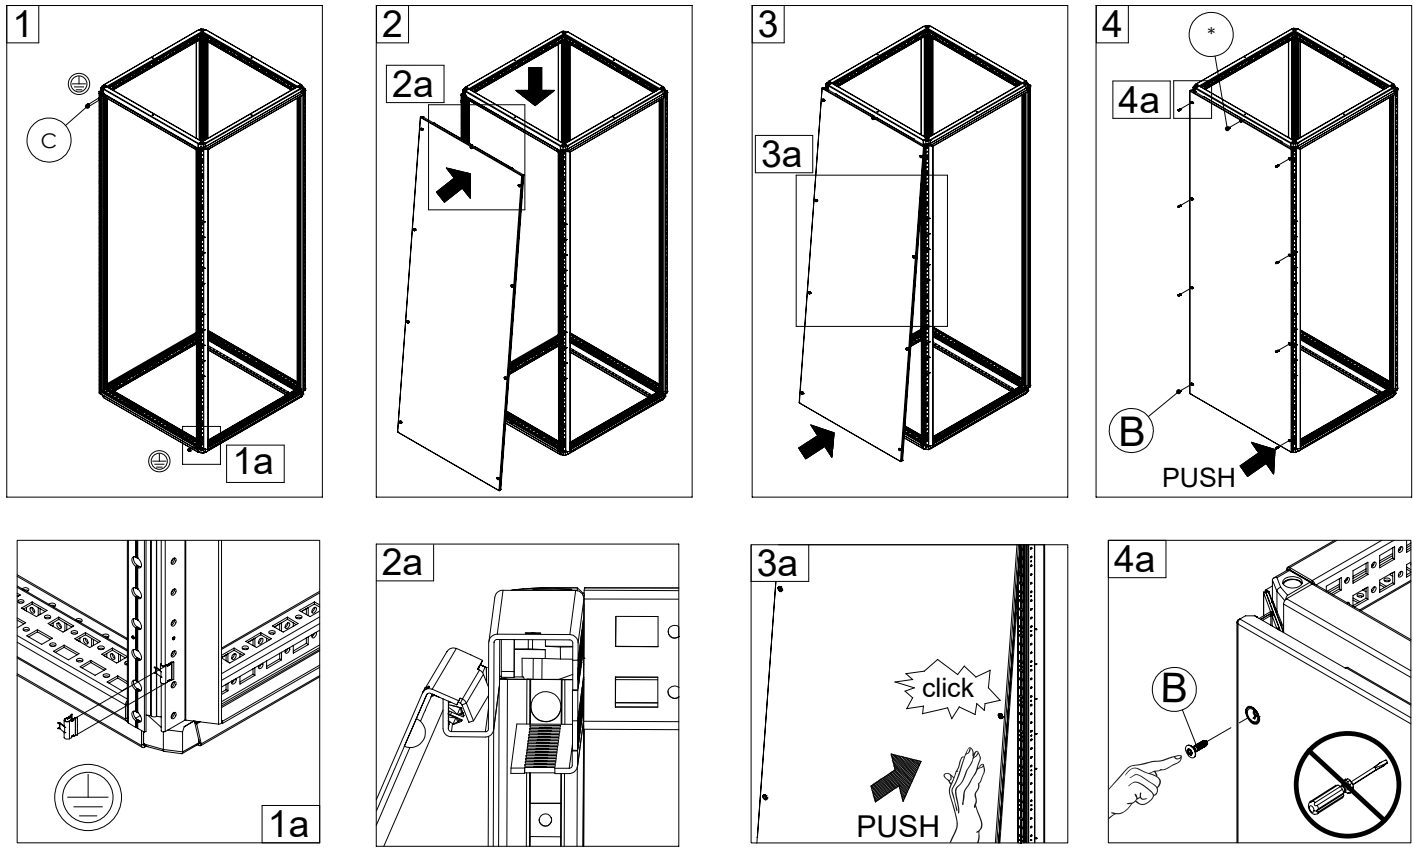

* - Used only on enclosures 800 mm deep and above.

Retainer mounting




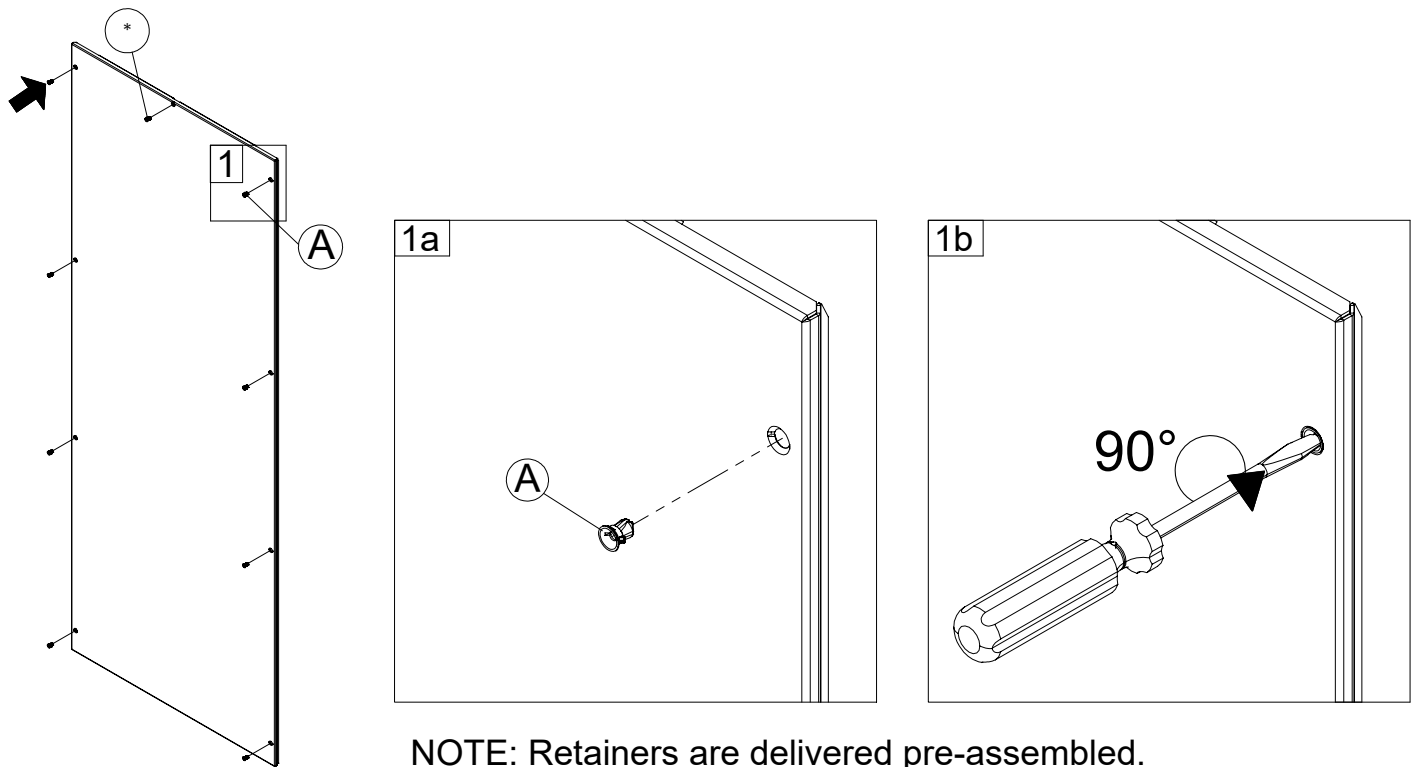


NOTE: Retainers are delivered pre-assembled.

SPM







Ref.	Pic.	Qty.
A		1
B	 M6x16	1
C		1

For the old design frame (800 mm in depth or more), the following additional steps are required:

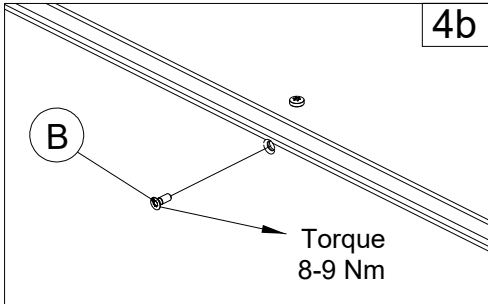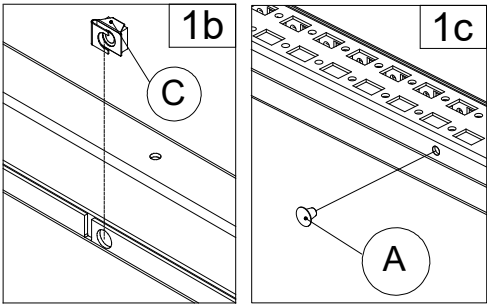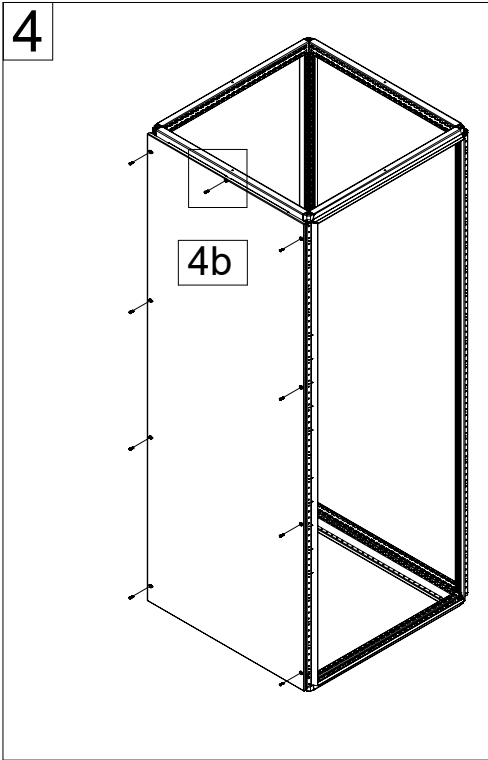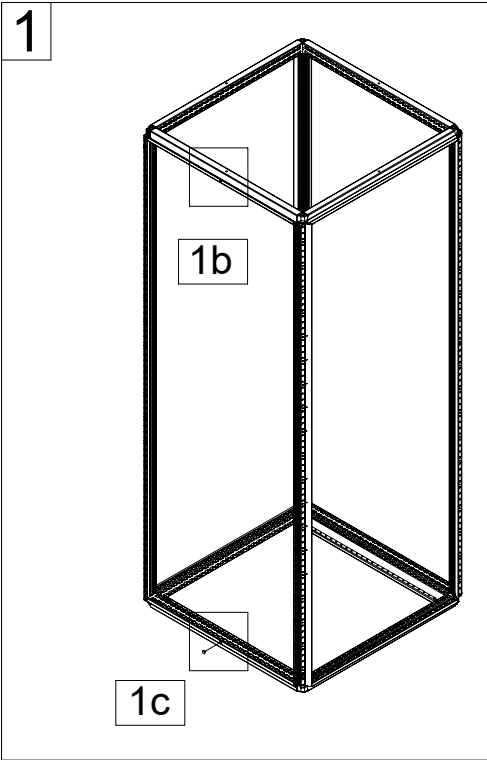







Ref.	Pic.	Qty.
A		8
B		6
C		12
D		6

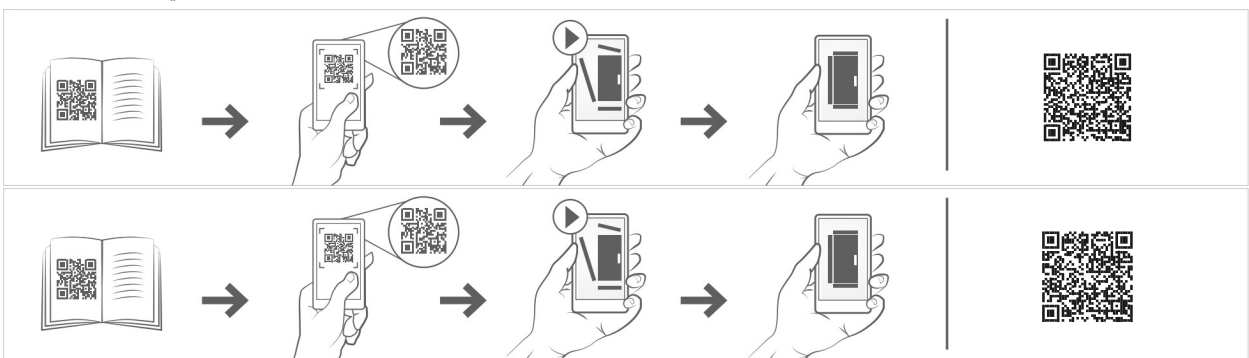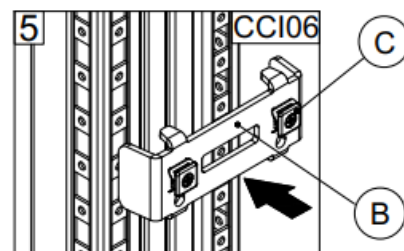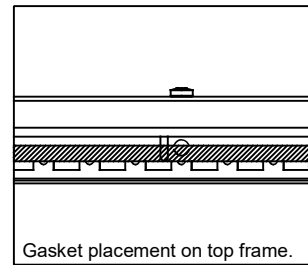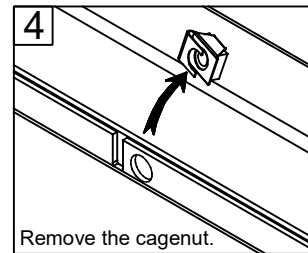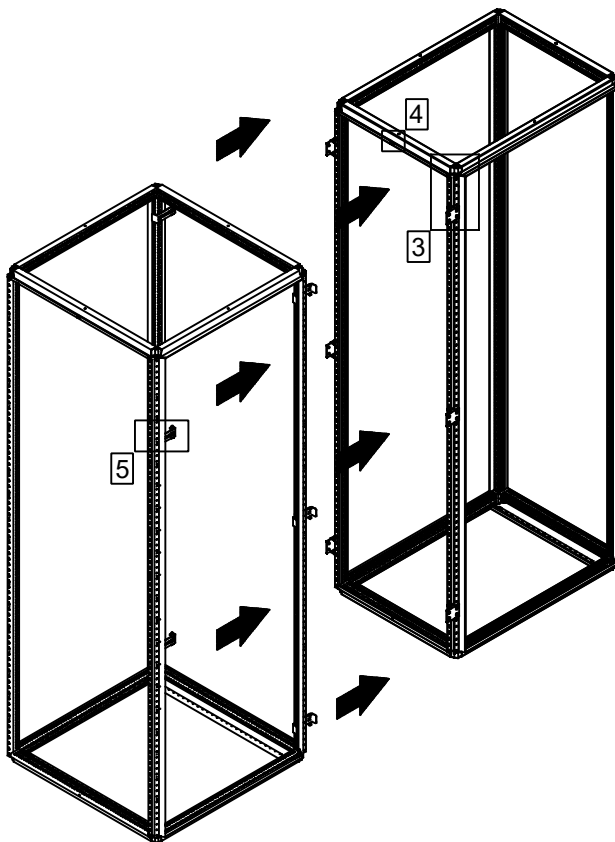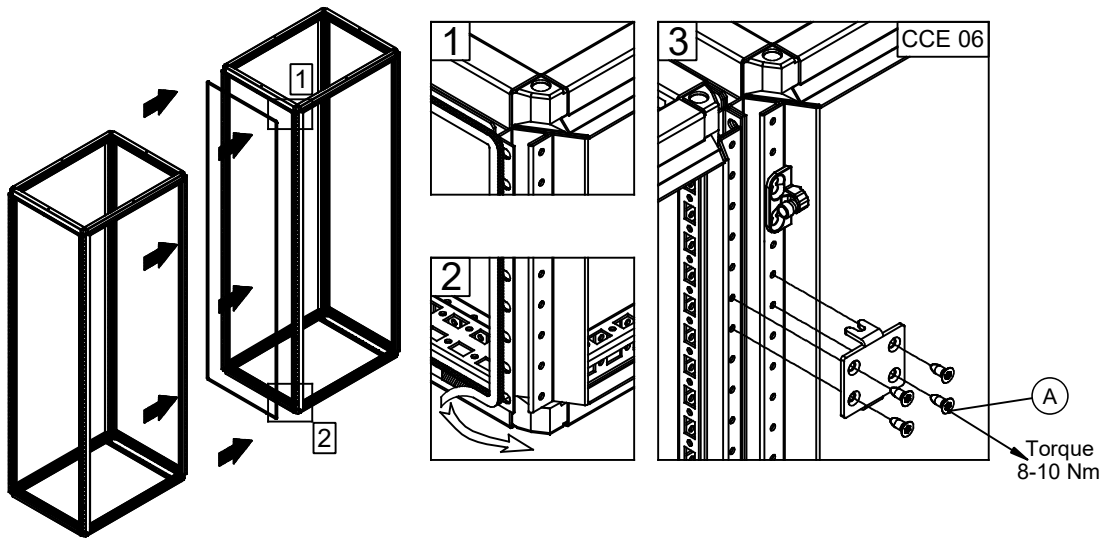



Ref.	Pic.	Qty.
A		4
B		4
C		2
D		4









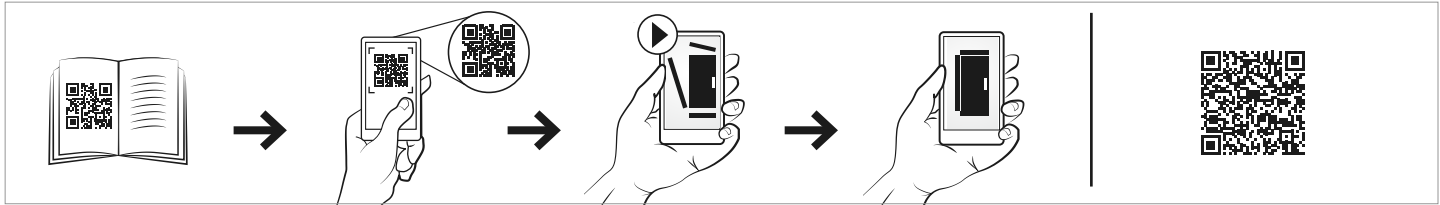
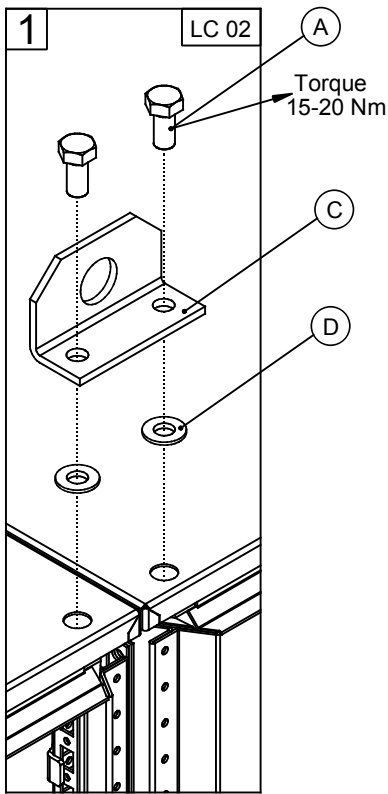
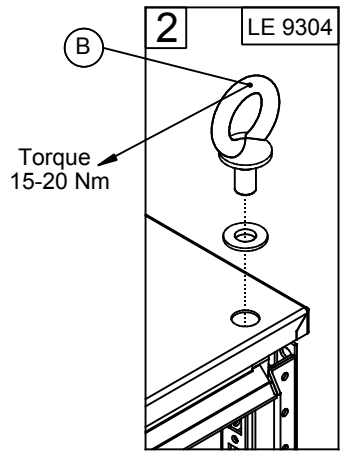
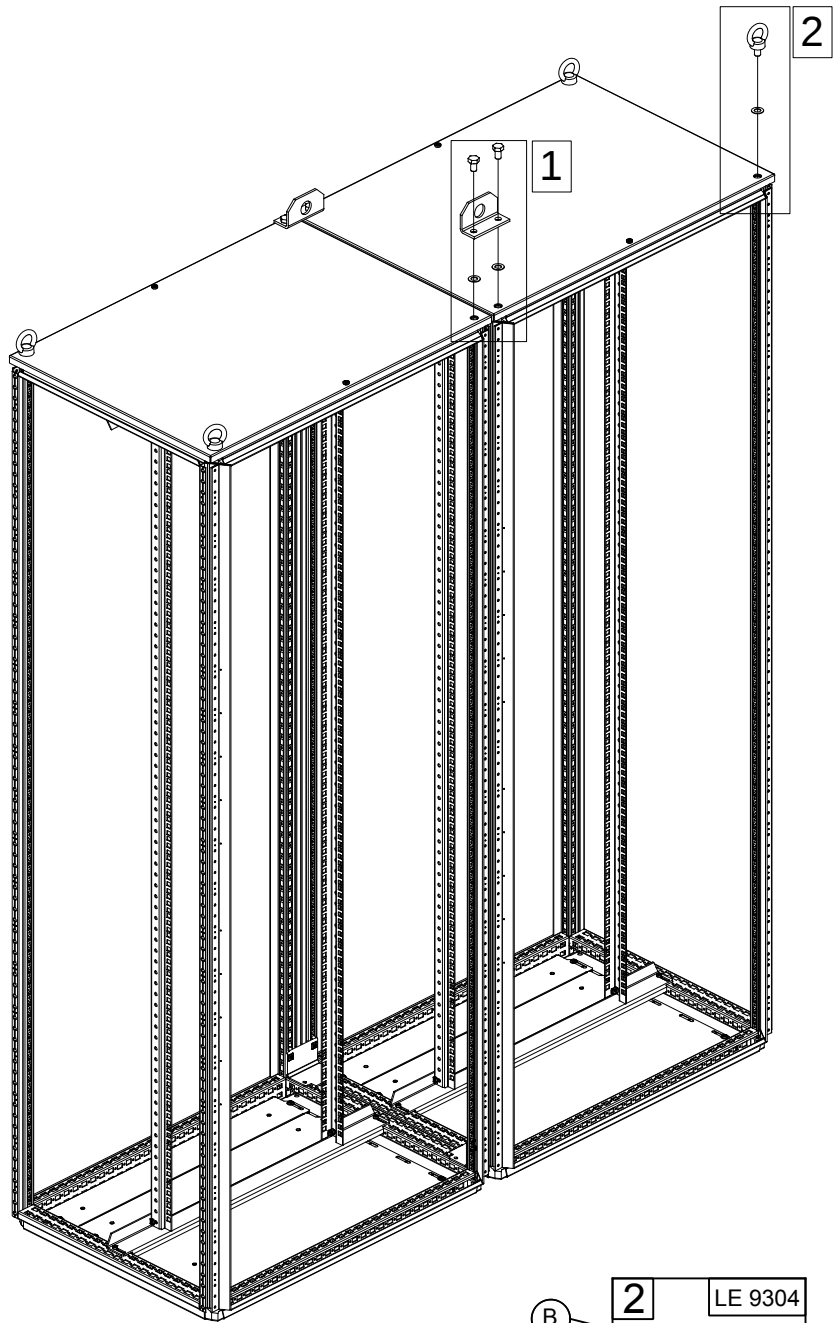




CCM 04


Ref.	Pic.	Qty.
A		4
B		8

MOUNTING

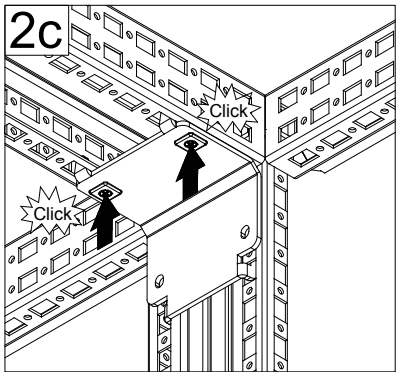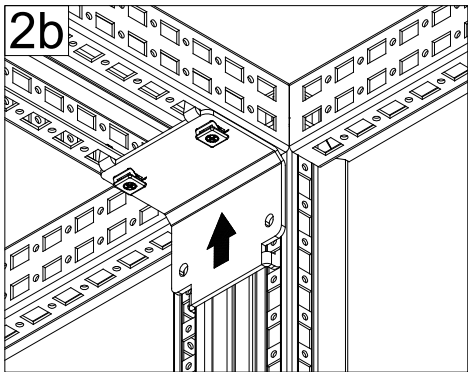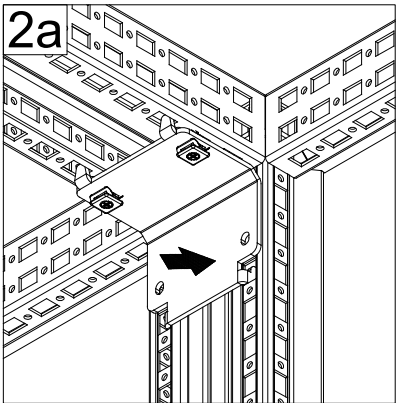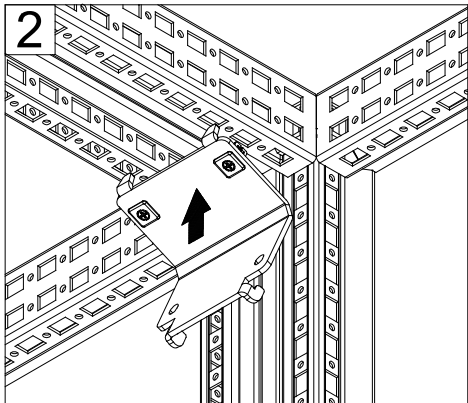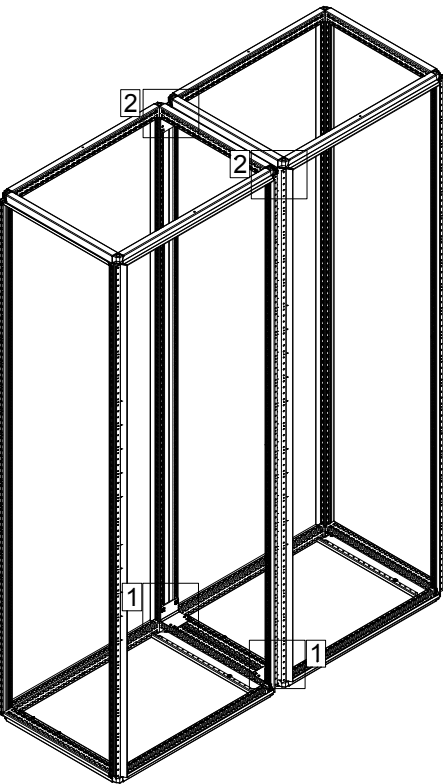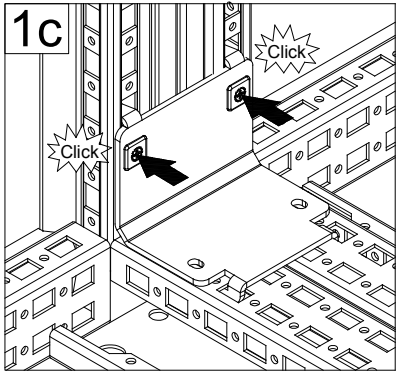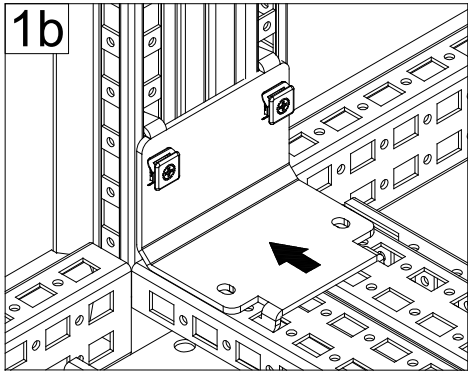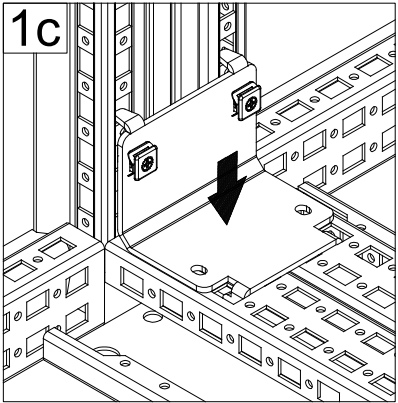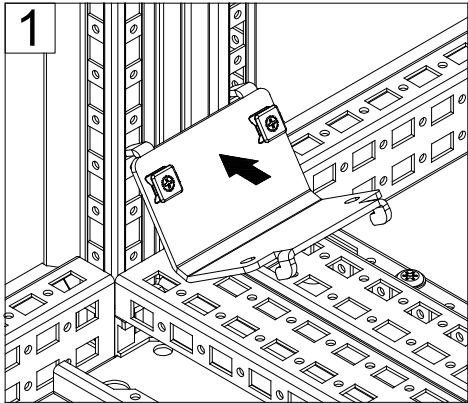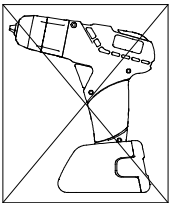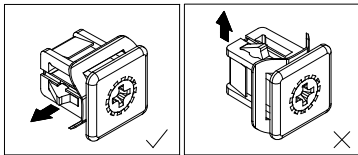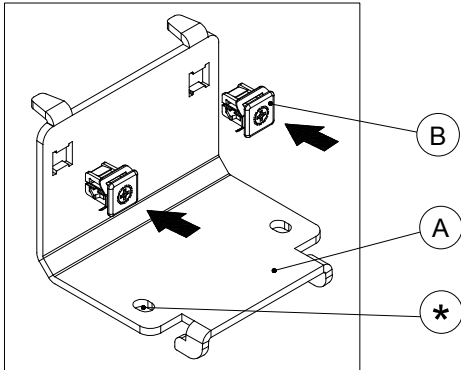







Note: It is mandatory for all four brackets to be installed at all four corners !


★ The fixation holes can be used to better fix the bracket to the frame, using cage nuts and screws !








DHN 180




Ref.	Pic.	Qty.
A		8

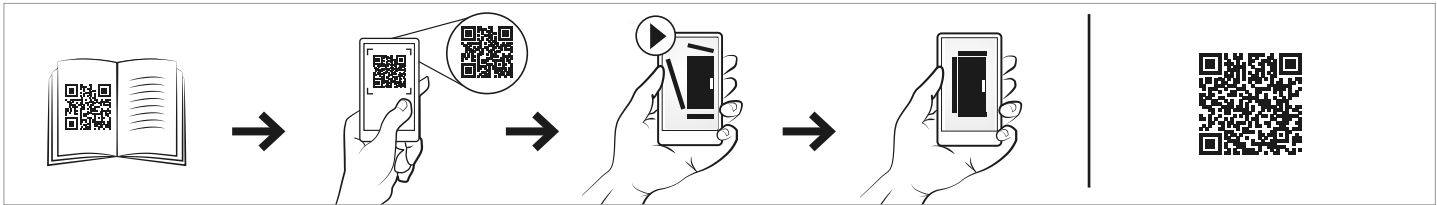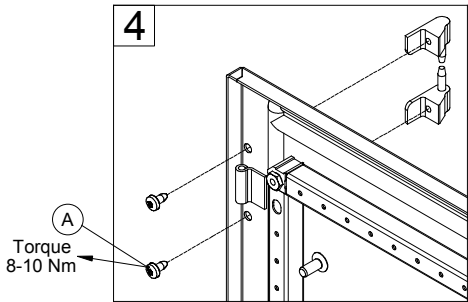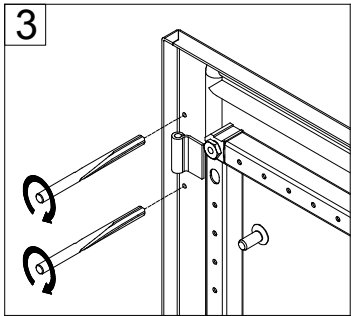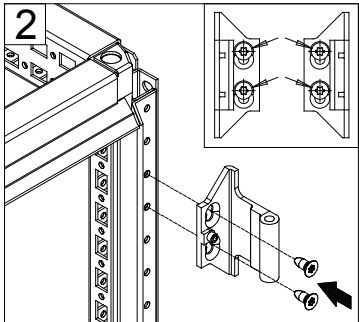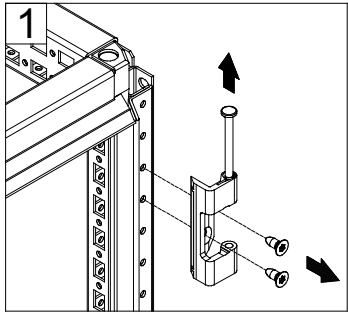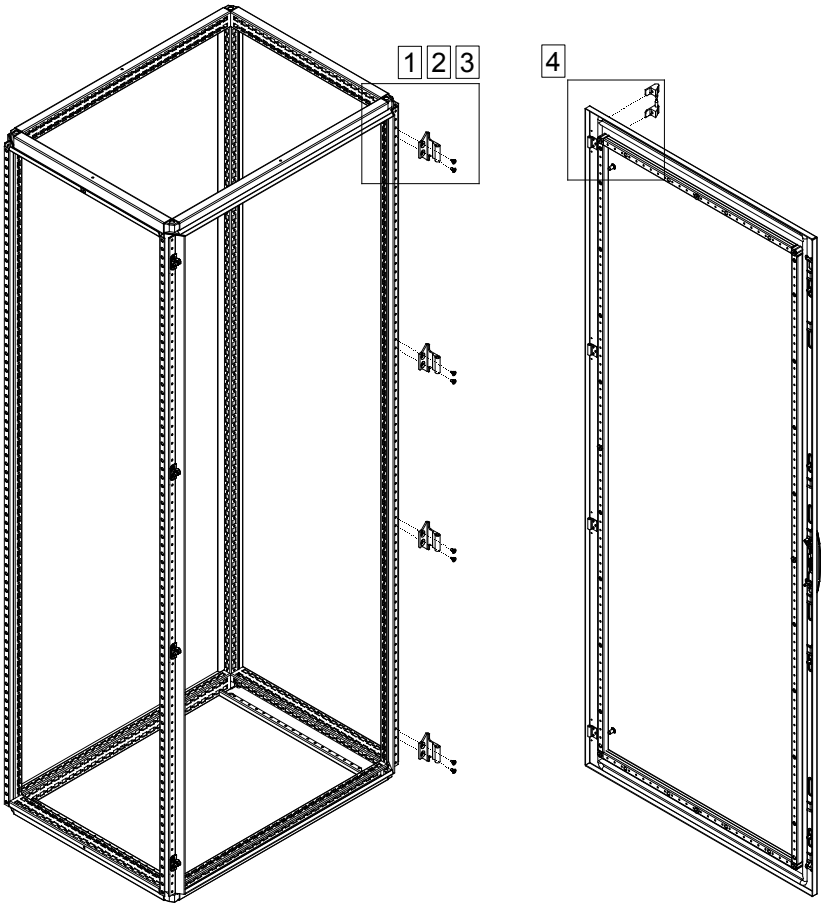








DHN 180 DOOR ADJUSTMENT

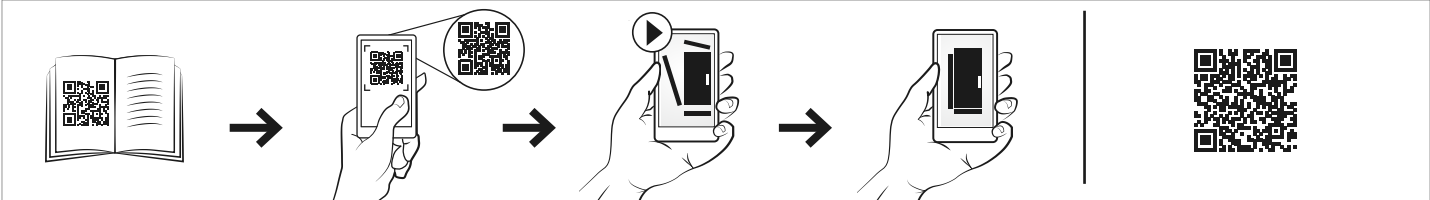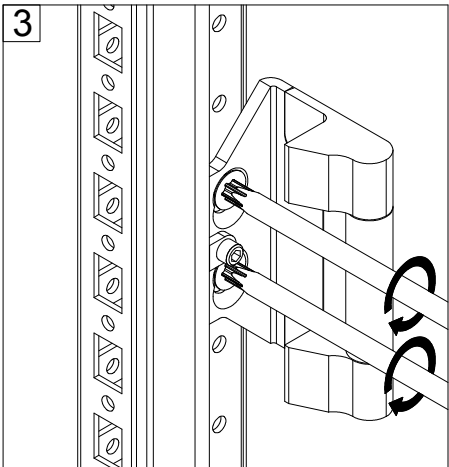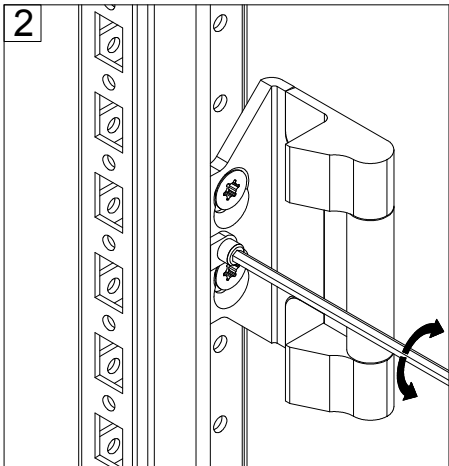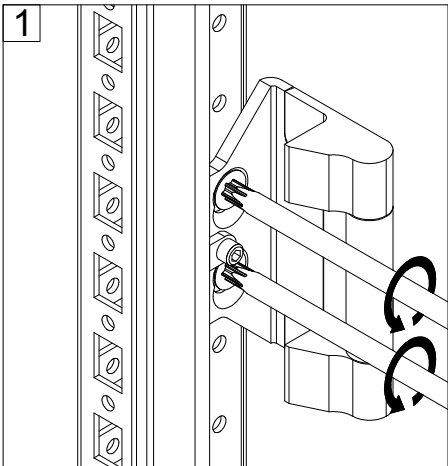
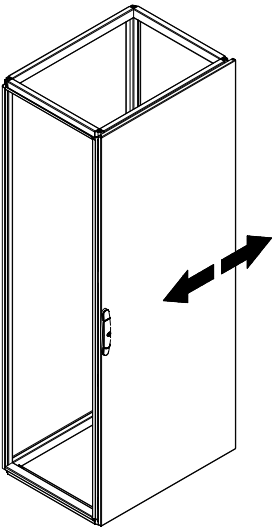


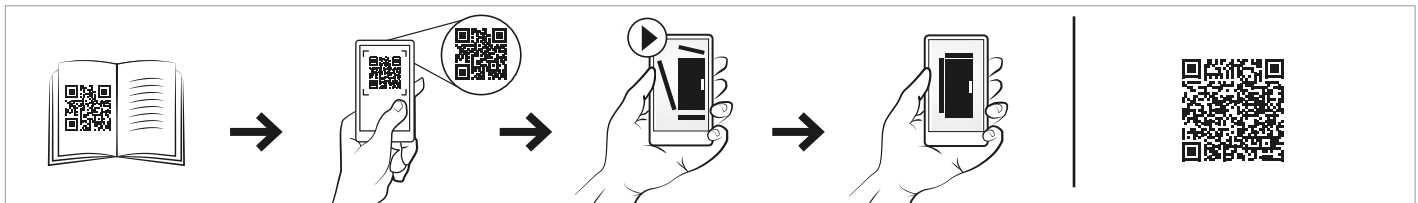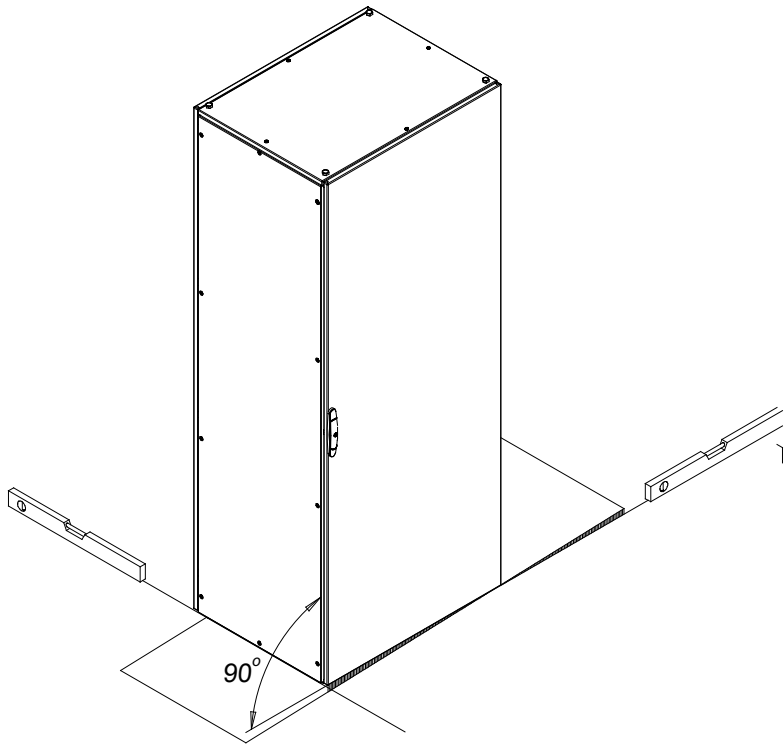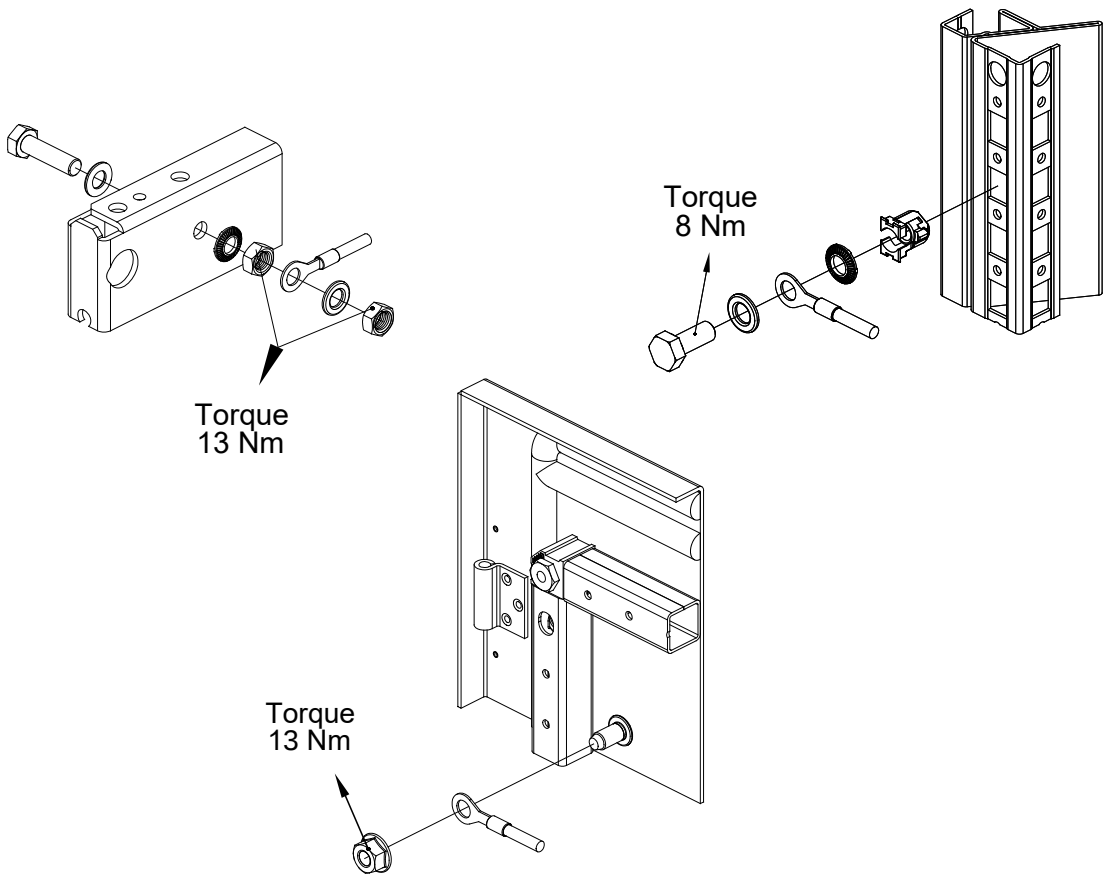


CNM

Ref.	Pic.		Qty.
A	M6	M8	1
			

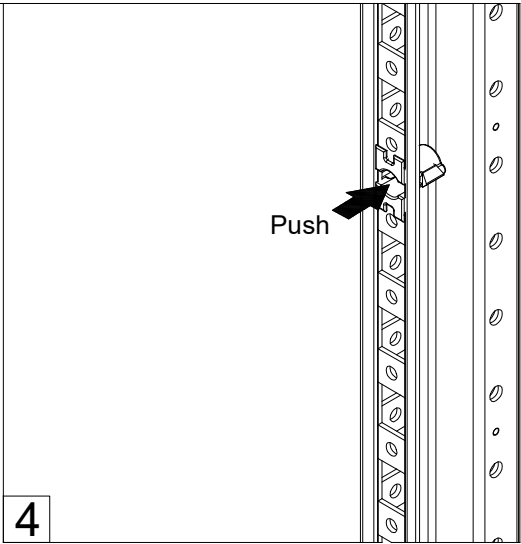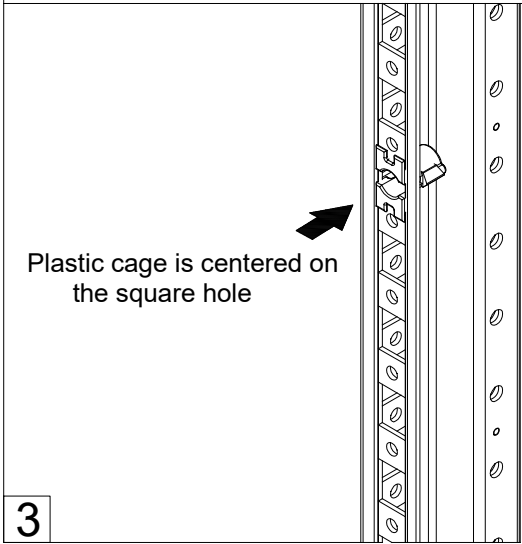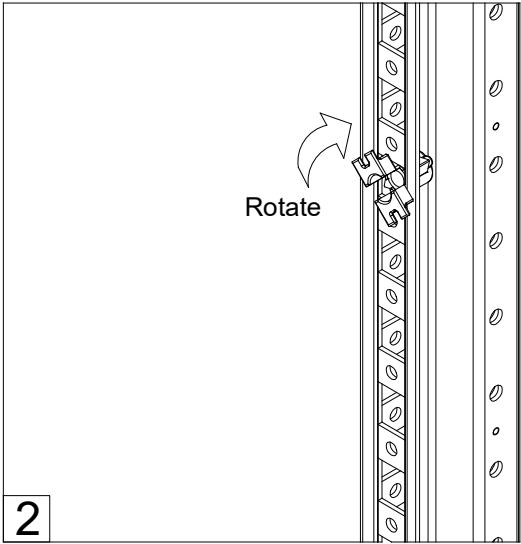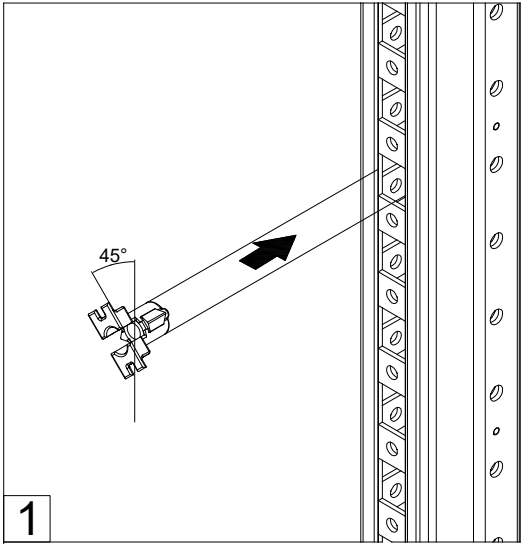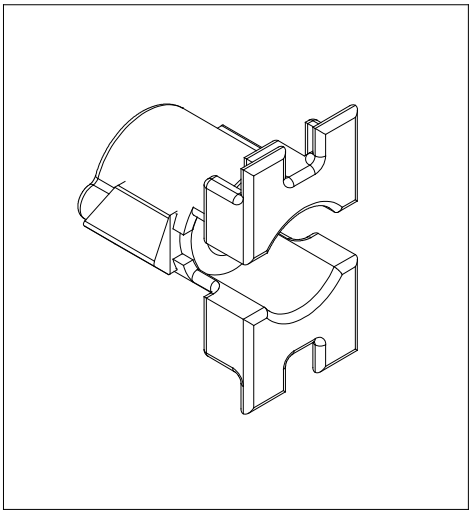

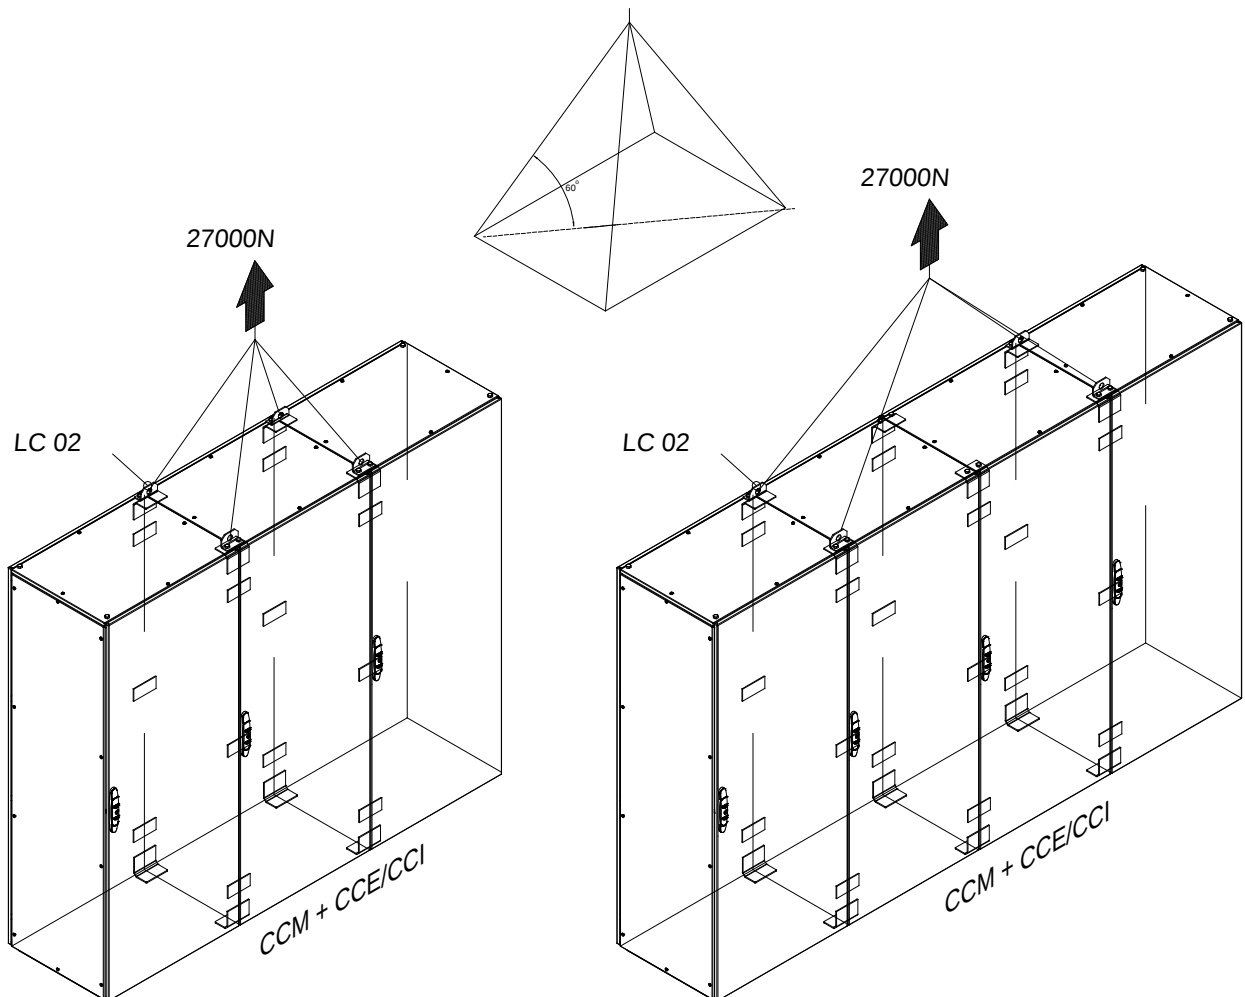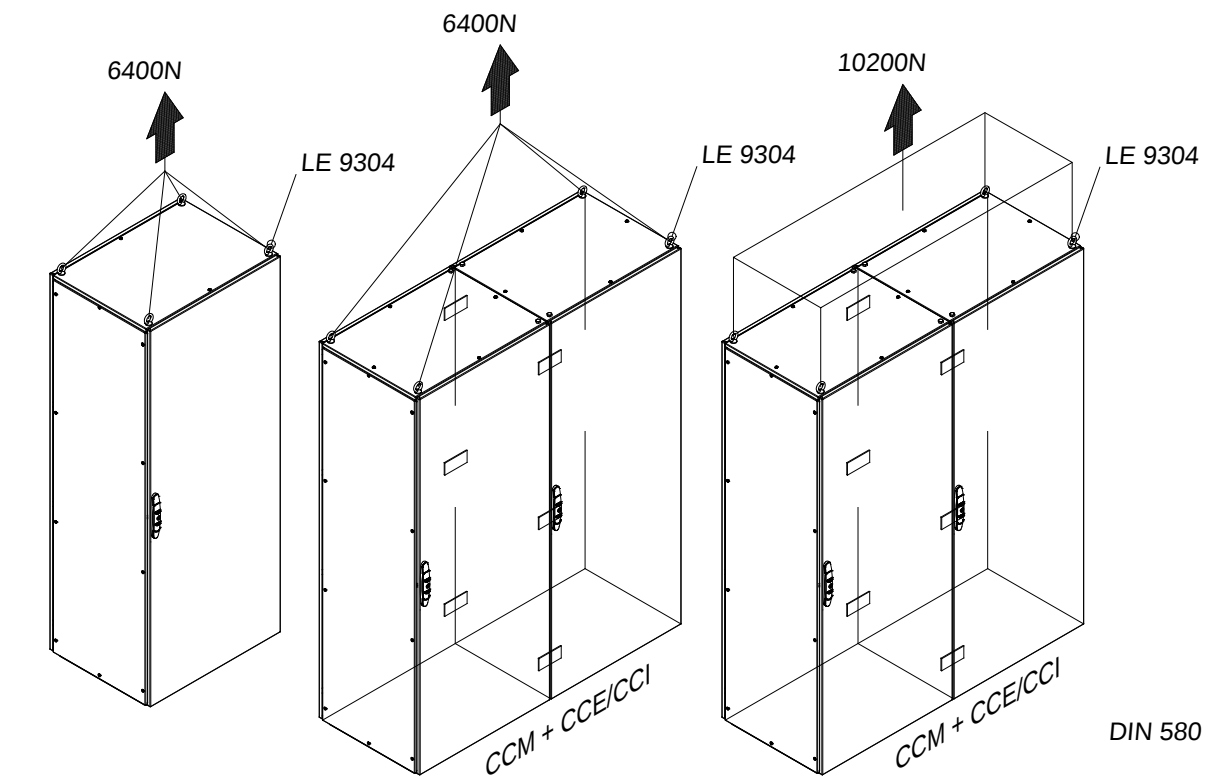



Mousepad RH into LH

